






 

 



 

 



 

 


 


 



 



 



 

 




 






 







 


	Original	Replacement	Original	Replacement
	 Power	 Power	 Right	 Right
1	1	 1	 Vol+	 Vol +
2	2	 2	 Left	 Left
3	3	 3	 Vol-	 Vol -
4	4	 4	 OK	 Ok
5	5	 5	 TV	 TV/R
6	6	 6	 Menu	 Menu
7	7	 7	 ?	 Smart
8	8	 8	 A	 Red
9	9	 9	 B	 Green
0	0	 0	 Blue/Picture Up	 SHIFT +  Shift + Up
-/--	-/--	 GUIDE	 Blue/Picture Down	 SHIFT +  Shift + Down
Mute	Mute	 MUTE	 Yellow/Sound	 SHIFT +  Shift + Right
Up	Up	 Up	 Yellow/Sound	 SHIFT +  Shift + Left
P+	P+	 Ch +	 White Up	 D Blue
Down	Down	 Down	 White Down	 C Yellow
P-	P-	 Ch -	 Sleep	 SLEEP Sleep





	Original	Replacement
	AV	 AV
	Text Info	 Info
	Text Info	 Text
	← PRG	 Back
	♪	 Dual
	[♦]	 Format
		 Pause
	Power VTR	 Shift + Power
	Timer VTR	 Pre Ch
	>> VTR	 >>
	<< VTR	 <<
	Play VTR	 Play
	Stop VTR	 Stop
	Pause VTR	 Shift + Pause
	Step VTR	 Shift + Play
	>>I VTR	 >>I
	I<< VTR	 I<<

	Original	Replacement
	Rec VTR	 Rec
	AV VTR	 Shift + AV

