 







 




 







 



 

 

 

 



 





 

 











 




 


 








Original	Replacement	Original	Replacement
 Power	 Power	 Down/CH-	 Down
 Mute	 Mute	 Vol+	 Vol +
 1	 1	 Right	 Right
 2	 2	 Left	 Left
 3	 3	 Vol-	 Vol -
 4	 4	 OK	 Ok
 5	 5	 Exit	 Exit
 6	 6	 Audio	 Dual
 7	 7	 Red	 Red
 8	 8	 Menu	 Menu
 9	 9	 PgUp	 Ch +
 0	 0	 PgDn	 Ch -
 SAT	 Smart	 FAV	 Pre Ch
 Zoom	 Eject	 EPG	 Guide
 FAV+	 >>I	 Tv/Radio	 TV/R
 FAV-	 I<<	 Green	 Green
 Up/CH+	 Up	 Recall	 Back









 




 



 





 

 

 



 



 

 






 
 





 

 

 



 



 
 
 
 





Original	Replacement	Original	Replacement
 PAUSE	Yellow	 C	Yellow
 PAUSE	Pause		Pause
 INFO	Blue	 D	Blue
 INFO	Info		Info





Original	Replacement	Original	Replacement
 Power	 Power	 Down/CH-	 Down
 Mute	 Mute	 Vol+	 Vol +
 1	 1	 Right	 Right
 2	 2	 Left	 Left
 3	 3	 Vol-	 Vol -
 4	 4	 OK	 Ok
 5	 5	 Exit	 Exit
 6	 6	 Audio	 Dual
 7	 7	 Menu	 Menu
 8	 8	 Red	 Red
 9	 9	 PgUp	 Ch +
 0	 0	 PgDn	 Ch -
 SAT	 Smart	 FAV	 Pre Ch
 Zoom	 Eject	 EPG	 Guide
 FAV+	 >>I	 Tv/Radio	 TV/R
 FAV-	 I<<	 Green	 Green
 Up/CH+	 Up	 Recall	 Back









 




 



 





 

 

 



 



 

 

 



 
 
 





 

 

 



 



 

 
 





Original	Replacement	Original	Replacement
 PAUSE	Yellow		Yellow
 PAUSE	Pause		Pause
 INFO	Blue		Blue
 INFO	Info		Info










 


Original	Replacement	Original	Replacement
 Power	 Power	 Down/CH-	 Down
 Mute	 Mute	 Right	 Right
 1	 1	 Vol+	 Vol +
 2	 2	 Vol-	 Vol -
 3	 3	 Left	 Left
 4	 4	 OK	 Ok
 5	 5	 Exit	 Exit
 6	 6	 Audio	 Dual
 7	 7	 Red	 Red
 8	 8	 Menu	 Menu
 9	 9	 PgUp	 Ch +
 0	 0	 PgDn	 Ch -
 SAT	 Smart	 FAV	 Pre Ch
 Zoom	 Eject	 EPG	 Guide
 FAV+	 >>I	 Tv/Radio	 TV/R
 FAV-	 I<<	 Green	 Green
 Up/CH+	 Up	 Recall	 Back





Original

Replacement

	Pause		Pause
	Yellow		Yellow
	Info		Info
	Blue		Blue

Original

Replacement

