




Original	Replacement
 Power	 Power
 Input TV	 Shift + AV / Input / RDS
 Aspect	 Picture / Format
 Input AV	 AV / Input / RDS
 Option	 Setup / OPT /
 Viera Link	 Smart / List
 SD Card	 D.Menu / Top
 Guide	 Guide / EPG / -/-
 Exit	 Exit / Cancel / Clear
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Menu	 Menu / Home
 Return	 Back / Return
 Red	 Red / Netflix / Search

Original	Replacement
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Text	 Text / Goto
 1	 1
 STTL	 Subtitle / EQ
 [≡i]/Index	 Shift + Info / Angle
 [≡+]/Hold	 Shift + Stop /
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0

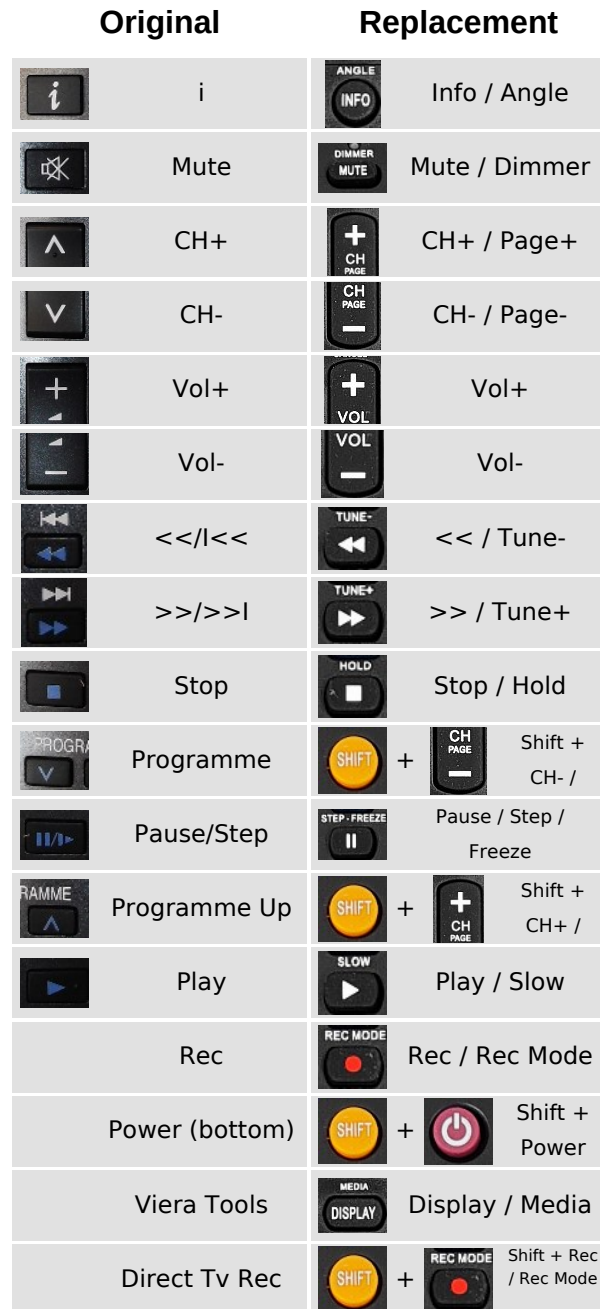



The image shows a black Mandis TV remote control with a variety of buttons. At the top, there is a red power button, a black DIMMER MUTE button, and a yellow SHIFT button. Below these are four blue buttons labeled TV, DVD, SAT, and AUX, each with a secondary function: SLOW, STEP-FREEZE, HOLD, and REC MODE. The next row contains four buttons with play, pause, stop, and record symbols. This is followed by a row of four buttons with left and right arrow symbols and two buttons with double left and double right arrow symbols. Below these are buttons for TITLE, LANG/VI, EQ, and SURROUND. The next row has buttons for SOUND, AUDIO, SUBTITLE, and a button with an upward arrow. This is followed by buttons for FORMAT, SIZE, TIMER, and PROGRAM. The next row has buttons for PICTURE, ZOOM, SLEEP, and TV/RADIO. Below these are buttons for TOP MENU, OPT-TOOLS, GOTO, and RDS. The next row has buttons for D.MENU, SETUP, TEXT, and AV INPUT. Below this is a row with HOME, MENU, and ANGLE buttons. The center features a directional pad with four blue arrow buttons and a central OK button. To the right of the directional pad is an INFO button. Below the directional pad are CLEAR, EXIT, and CANCEL buttons. To the right of the directional pad are RETURN and BACK buttons. Below the directional pad is a LIST button. To the right of the directional pad is a button with a plus sign and CH PAGE. Below the directional pad is a button with a plus sign and VOL. To the right of the directional pad is a button with a plus sign and CH PAGE. Below the directional pad is a button with a minus sign. Below this is a row of three buttons labeled TV, DVD, and CD-STB. Below these are buttons labeled 1, 2, and 3. Below these are buttons labeled VIDEO, TAPE, and TUNER. Below these are buttons labeled 4, 5, and 6. Below these are buttons labeled AUX-HDD, USB, and BLUETOOTH. Below these are buttons labeled 7, 8, and 9. Below these are buttons labeled J--, HDMI-SAT, and PC. Below these are buttons labeled GUIDE EPG, 0, and FAV MARKER. At the bottom, there is a row of four buttons labeled NETFLIX, APP, YouTube, and Prime Video. Below these are buttons labeled SEARCH, REPEAT, REPEAT A-B, and RANDOM. The Mandis logo and website URL are at the very bottom.