





 













 


























 










| Original | Replacement | Original | Replacement |
|-------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------|-----------------------------------------------------------------------------------------------------------|
| PWR On/Off |  Power | OK Enter |  OK |
| Mute |  Mute / Dimmer | Menu Right |  Right |
| Epg |  Guide / EPG / -/-- | Exit |  Exit / Cancel / Clear |
| Subt.List |  Subtitle / EQ | Menu Down |  Down |
| Opt? |  Setup / OPT / | Back |  Back / Return |
| App |  +  Shift + Green / APP / | Volume+ |  Vol+ |
| Sleep Timer |  Sleep / Timer | Audio |  Audio / Lang I/II |
| TV |  TV/Radio / | CH/Page+ |  CH+ / Page+ |
| Info |  Info / Angle | Volume- |  Vol- |
| Video |  +  Shift + 4 | CH/Page- |  CH- / Page- |
| Text |  Text / Goto | 1. ? |  1 |
| Zoom |  Zoom / Size | 2abc |  2 |
| TV/SAT |  AV / Input / RDS | 3def |  3 |
| Menu |  Menu / Home | 4ghi |  4 |
| Menu Up |  Up | 5jkl |  5 |
| Display |  Display / Media | 6mno |  6 |
| Menu Left |  Left | 7pqrm |  7 |



| Original | Replacement | Original | Replacement |
|---------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------|--------------------------------------------------------------------------------------------------|
| 8tuv |  8 | Sys/Serv |  D.Menu / Top |
| 9wxyz |  9 | | |
| Guide Pilote |  +  Shift + Guide / EPG / -/- | | |
| 0/10 |  0 | | |
| FAV Pref. |  Fav / Marker / PC | | |
| Red |  Red / Netflix / Search | | |
| West |  I<< / Preset- | | |
| Dev |  >>I / Preset+ | | |
| Freeze |  +  Shift + Pause / Step / | | |
| Green |  Green / APP / Repeat | | |
| Yellow |  Yellow / YouTube / Repeat | | |
| East |  Rec / Rec Mode | | |
| Blue |  Blue / Prime Video / Random | | |
| Dec/Pause |  Pause / Step / Freeze | | |
| Lang./Rewind |  << / Tune- | | |
| H/V Play |  Play / Slow | | |
| LNB F.Forward |  >> / Tune+ | | |

