



| Original | Replacement | Original | Replacement |
|------------|------------------------|-----------|-------------------|
| Standby | Power | 0 | 0 |
| Open/Close | Eject / Surround | Title | Sound / Title |
| Audio | Audio / Lang I/II | Up | Up |
| 1 | 1 | Menu | Menu / Home |
| 2 | 2 | Left | Left |
| 3 | 3 | OK | OK |
| Angle | Info / Angle | Right | Right |
| 4 | 4 | Display | Display / Media |
| 5 | 5 | Down | Down |
| 6 | 6 | Video Out | AV / Input / RDS |
| Subtitle | Subtitle / EQ | Return | Back / Return |
| 7 | 7 | Setup | Setup / OPT / |
| 8 | 8 | Mode | D.Menu / Top |
| 9 | 9 | Vol+ | Vol+ |
| Search | Red / Netflix / Search | Mute | Mute / Dimmer |
| PRG | TV/Radio / | Mark | Fav / Marker / PC |
| CLR | Exit / Cancel / Clear | Zoom | Zoom / Size |



