











 





 

 

 



Original	Replacement
 Power	 Power
 Smart	 Smart / List
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Info	 Info / Angle
 0	 0
 Guide	 Guide / EPG / -/-
 Netflix	 Shift + Red / Netflix /
 YouTube	 Shift + Yellow / YouTube /
 Google Play	 Display / Media

Original	Replacement
 prime video	 Shift + Blue / Prime
 Home	 Shift + Menu /
 Up	 Up
 Menu	 Menu / Home
 Left	 Left
 OK	 OK
 Right	 Right
 Back	 Back / Return
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Vol+	 Vol+
 Mute	 Mute / Dimmer
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Source	 AV / Input / RDS
 CH-	 CH- / Page-
 Red	 Red / Netflix / Search





Original	Replacement	Original	Replacement
	Green  Green / APP / Repeat		
	Yellow  Yellow / YouTube / Repeat		
	Blue  Blue / Prime Video / Random		
	<<  << / Tune-		
	Play  Play / Slow		
	>>  >> / Tune+		
	Rec  Rec / Rec Mode		
	Pause  Pause / Step / Freeze		
	Stop  Stop / Hold		
	Text  Text / Goto		
	Subt  Subtitle / EQ		
	Audio  Audio / Lang I/II		

Original	Replacement	Original	Replacement

