




 


 




 

 


 

 
 





 














 

 

 

 

 









| Original | Replacement | Original | Replacement |
|--|---|---|---|
|  AUX |  1 |  A/B/C/D/E Tuner |  Smart |
|  Tape |  2 |  << CD |  << |
|  Tuner |  3 |  >> CD |  >> |
|  CD |  4 |  Disc CD |  List |
|  Phono |  5 |  Play CD |  Play |
| |  6 |  I<< CD |  I<< |
| |  7 |  >>I CD |  >>I |
|  Dir A Tape |  Menu |  Pause/Stop CD |  Stop |
|  Dir B Tape |  Info |  Sleep |  Sleep |
|  Rec/Pause Tape |  Up |  Power |  Power |
|  Play Tape |  Ok |  Volume- |  Vol - |
|  Stop Tape |  Down |  Volume+ |  Vol + |
|  << Tape |  Left | | |
|  >> Tape |  Right | | |
|  A/B Tape |  Exit | | |
|  Preset - Tuner |  Ch - | | |
|  Preset + Tuner |  Ch + | | |

