



 
 

 
















 






 

 




 

 

 










Original	Replacement	Original	Replacement
 Power	 Power	 Auto	 Media
 Mute	 Mute	 LCD Menu	 Menu
 Display	 Shift + Info	 V+	 Vol +
 1	 1	 V-	 Vol -
 2	 2	 P+	 Ch +
 3	 3	 P-	 Ch -
 4	 4	 Up	 Up
 5	 5	 Left	 Left
 6	 6	 Enter	 Ok
 7	 7	 Right	 Right
 8	 8	 Down	 Down
 9	 9	 S.Mode	 Shift + Dual
 0	 0	 P.Mode	 Format
 -/--	 Shift + Guide	 Nicam	 Options
 Recall	 Back	 Sleep	 Sleep
 DVB Menu	 D. Menu	 FAV	 Pre Ch
 Input	 AV	 Text	 Text





Original	Replacement
Hold	Stop
FAV-	Shift + Ch +
Info	Info
Lang	Dual
EPG	Guide
FAV+	Shift + Ch -
Index	Smart
Size	Eject
Reveal	3D
Subpage	Shift + Subt
Red/Tv/Radio	Red
Red/Tv/Radio	TV/R
Green/Audio	Green
Green/Audio	List
Yellow/Freeze	Yellow
Yellow/Freeze	Pause
Blue/Subtitle	Blue

Original	Replacement
Blue/Subtitle	Subt

