


 



 



 




 


 

 

 




 
 









 
 
 


 
 

 
 
 
 
 
 

 

 

 

 
 
 









Original		Replacement		Original		Replacement	
	Power		Power		Left		Left
	Source		AV		OK		Ok
	[+]		Format		Right		Right
	<</>		<<		Down		Down
	Play		Play		Return		Back
	Pause		Pause		Options		Options
	>/>/>>		>>		Home		Smart
	Sync Menu		Menu		Red		Red
	Stop		Stop		Green		Green
	Theatre		Media		Yellow		Yellow
	Digital		TV/R		Blue		Blue
	Analog		D. Menu		1		1
	Exit		Exit		2		2
	AD		Shift + Subt		3		3
	Guide		Guide		4		4
	[i+]/[?]		Info		5		5
	Up		Up		6		6



