

Original	Replacement	Original	Replacement
Power		Power	
Mute		Mute	
CD Play/Pause		Play	
CD Play/Pause		Pause	
CD Stop		Stop	
TAPE Rec		Rec	
CD ICD I<<<		I<<<	
TAPE <<<		<<<	
TAPE >>>		>>>	
CD >>>I		>>>I	
D.Skip		List	
SURR		Dual	
Program		Options	
Sleep		Sleep	
Repeat		Text	
TAPE Rev. Play		Left	
TAPE Stop		Ok	
TAPE Play		Right	
Volume+		Vol +	
EQ Patt.		Smart	
Preset+		Ch +	
Volume-		Vol -	
XDSS		Media	
Preset-		Ch -	
1		1	
2		2	
3		3	
4		4	
5		5	
6		6	
7		7	
8		8	
9		9	
0		0	



A black Mandis TV remote control with various buttons. At the top are a red power button, a black mute button, and an orange shift button. Below these are four blue buttons: TV, DVD, SAT, and AUX. The next row contains four black buttons: PLAY MODE (with a right arrow), a pause button (II), a stop button (■), and a record button (●) labeled REC MODE. The following row has four black buttons: a double left arrow (◀◀), a double right arrow (▶▶), a left arrow (◀), and a right arrow (▶). Below these are four black buttons: DISC NAV, SOUND, AD, and SETTINGS. The next row contains four black buttons: LIST, DUAL, SUBT, and OPT. The following row has four black buttons: PROG, SEARCH, PICTURE, and ECO. The next row contains four black buttons: SLEEP, TV/R, FORMAT, and 3D. The following row has four black buttons: E-MANUAL, REPEAT, ZOOM, and TIMER. The next row contains four black buttons: D.MENU, TEXT, an up arrow (▲), and AV. Below these are two black buttons: TOP MENU and MENU, and a black button labeled DISPLAY and INFO. The center features a blue directional pad with an OK button in the middle. To the left of the pad are two black buttons: CLEAR and EXIT. To the right are two black buttons: RETURN and BACK. Below the directional pad are four buttons: a volume up/down button (+/-) labeled VOL, a HOME button, a SMART button, an APP button, a MEDIA button, a channel up/down button (+/-) labeled CH, and a numeric keypad (1-9, 0, *, #). The bottom row contains four colored buttons: red (A), green (B), orange (C), and blue (D). At the very bottom is the Mandis shop logo and the website address www.mandis.tv.