


 

 













 

 














 

 








 







 



 
 
 
 

 

 




 


Original	Replacement
 Power	 Power
 TV	 TV/R
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Shift + Guide
 Pre-CH	 Pre Ch
 Vol +	 Vol +
 Vol -	 Vol -
 Mute	 Mute

Original	Replacement
 Source	 AV
 P +	 Ch +
 P -	 Ch -
 Guide	 Guide
 Menu	 Menu
 W.Link	 Smart
 Tools	 Options
 Return	 Back
 Wheel Left	 Shift + Left
 Wheel Right	 Shift + Right
 Enter	 Ok
 Info	 Info
 Exit	 Exit
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left





Original	Replacement	Original	Replacement
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	TTX / Mix		Text
	Info.L		Shift + Info
	DMA		3D
	E.Mode		Dual
	Content		Media
	Subt.		Subt
	<<		<<
	<<		I<<
	Pause		Pause
	>>		>>
	>>		>>I
	Rec		Rec
	Play		Play

