

 

 




Original	Replacement
 Power	 Power
 TV/VCR - DVD	 Smart
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Guide
 Mute	 Mute
 I-II Audio	 Dual
 TV/Text	 Text
 Input	 AV

Original	Replacement
 Vol+	 Vol +
 Vol-	 Vol -
 P/TRK+	 Ch +
 P/TRK-	 Ch -
 Slow+	 Shift + Ch +
 Slow-	 Shift + Ch -
 << / Index	 <<
 S.Mode	 Shift + Dual
 P.Mode	 Format
 >> / Mix	 >>
 I<<	 I<<
 >>I	 >>I
 Stop	 Stop
 Play / Pause	 Play
 Play / Pause	 Pause
 Red / Menu	 Red
 Red / Menu	 Menu





Original	Replacement
Green / DVD	Green
Green / DVD	D. Menu
Yellow / P.Size	Yellow
Blue / Info	Blue
Blue / Info	Info
Up	Up
Left	Left
Enter	Ok
Right	Right
Down	Down
Open / Close	Eject
Rec / Return	Rec
Rec / Return	Back
Pre-CH	Pre Ch
Step	Shift +  Pause
Sleep	Sleep
Show View	Media

Original	Replacement
Clear	Exit
Angle	3D
Repeat	Shift +  Text
SP/LP	TV/R
Crystal PB	Options
Zoom	Shift +  Eject
Subtitle	Subt

