


 
 
 

 



 



 



 



 





 

 









 

 

 









 



 
 


 



 




Original	Replacement	Original	Replacement
 Power	 Power	 Left	 Left
 I-II	 Dual	 OK	 Ok
 Sleep	 Sleep	 1	 1
 FAV	 Pre Ch	 2	 2
 Tv/Radio	 TV/R	 3	 3
 Mute	 Mute	 4	 4
 Picture	 Format	 5	 5
 Sound	 Shift + Dual	 6	 6
 Source	 AV	 7	 7
 Info	 Info	 8	 8
 Exit	 Exit	 9	 9
 Menu	 Menu	 0	 0
 CH+	 Ch +	 ATV/DTV/+10	 Guide
 CH-	 Ch -	 Back/Subtitle	 Back
 Up	 Up	 [/≡]/TTX	 Text
 Down	 Down	 Open/Close	 Eject
 Right	 Right	 [≡x]/Aspect/Cancel	 Media





Original	Replacement
Setup/DVD/CH.Lis	Options
Vol+	Vol +
[≡i]/Index	List
Play/Pause	Play
[≡♦]/Size	Shift + Format
Title/EPG	Shift + Guide
[≡?]/Slow/Reveal	D. Menu
[≡o]/Repeat/Sub	Subt
[≡+]/Goto/Hold	3D
Stop	Stop
A-B/Subtitle	Smart
Red	Red
Vol-	Vol -
Green	Green
Yellow	Yellow
Blue	Blue
<<<	<<<

Original	Replacement
I<<<	I<<<
>>>	>>>
>>I	>>I

