



Original	Replacement	Original	Replacement
 Power	 Power	 Yellow/Repeat	 Yellow
 I<<	 I<<	 Blue/A-B	 Blue
 Open/Close	 Eject	 CH+	 Ch +
 <<	 <<	 CH-	 Ch -
 >>	 >>	 Tv-Menu	 Menu
 >>	 >>	 TV/AV	 AV
 Play/Pause	 Play	 Vol+	 Vol +
 TV/TXT/Language	 Text	 Vol-	 Vol -
 Cancel/Zoom	 Shift + Eject	 DTV	 Smart
 Reveal/Subtitle	 Subt	 DVD Setup	 Shift + Menu
 Stop	 Stop	 Exit	 Exit
 Hold/Menu	 D. Menu	 Display	 Shift + Info
 Size/Angle	 Format	 Up	 Up
 Subpage/Title	 Options	 Down	 Down
 Index/Goto	 Media	 Right	 Right
 Red/Program	 Red	 Left	 Left
 Green/Slow	 Green	 OK	 Ok





Original		Replacement	
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--	+	Shift + Guide
	Recall		Pre Ch
	Picture	+	Shift + Format
	Sound	+	Shift + Dual
	Nicam/A2		Dual
	Mute		Mute
	Sleep		Sleep

Original		Replacement	
	Info		Info
	Subtitle	+	Shift + Subt
	Channel List		List
	EPG		Guide
	Tv/Radio		TV/R
	FAV	+	Shift + Pre Ch
	Aspect		3D

