







 

Original	Replacement
Standby	Power
Open/Close	Eject
Subtitle	Subt
Audio	Dual
Angle	3D
Time	D. Menu
Setup	Options
Stop	Stop
Play	Play
Source	AV
Record	Rec
Pause	Pause
FBW	<<
FFW	>>
Prev	I<<
Slow	Shift + Play
Next	>>I

Original	Replacement
DV	Smart
Return	Back
ADD/Clear	Exit
GOTO	Pre Ch
Up	Up
Down	Down
Edit	Red
Left	Left
Right	Right
Enter	Ok
Discfunc	Guide
Shuffle	TV/R
Program	Sleep
Repeat	Text
Zoom	Shift + Eject
USB	Media
Timer	Shift + AV





Original	Replacement	Original	Replacement
 Channel-	 Ch -	 9	 9
 Channel+	 Ch +	 0	 0
 NTSC/PAL	 Format	 A-B	 Shift + Text
 Display	 Info		
 Volume-	 Vol -		
 Volume+	 Vol +		
 Title	 List		
 Menu	 Menu		
 Mute	 Mute		
 1	 1		
 2	 2		
 3	 3		
 4	 4		
 5	 5		
 6	 6		
 7	 7		
 8	 8		

Original	Replacement	Original	Replacement
 9	 9		
 0	 0		
 A-B	 Shift + Text		

