


 
















Original	Replacement	Original	Replacement
 Power	 Power	 Vol+	 Vol +
 Source	 AV	 Vol-	 Vol -
 HDMI	 Media	 P+	 Ch +
 1	 1	 P-	 Ch -
 2	 2	 Home	 Smart
 3	 3	 Menu	 Menu
 4	 4	 Guide	 Guide
 5	 5	 Tools	 Options
 6	 6	 Info	 Info
 7	 7	 Return	 Back
 8	 8	 Exit	 Exit
 9	 9	 Up	 Up
 0	 0	 Down	 Down
 TTX/MIX	 Text	 Right	 Right
 PRE-CH	 Pre Ch	 Left	 Left
 Mute	 Mute	 Red	 Red
 CH List	 List	 Green	 Green





	Original	Replacement		Original	Replacement
	Yellow		Yellow		
	Blue		Blue		
	Dual I-II		Dual		
	Content		D. Menu		
	3D		3D		
	Alarm		TV/R		
	P.Size		Format		
	Subt.		Subt		
	Enter		Ok		
	<</ <<		<<		
	Pause		Pause		
	>>/>>		>>		
	Play		Play		
	Rec		Rec		
	Stop		Stop		

