
 
 



 
 

 
 

 

 

 




 
 


 

 


 









 





Original	Replacement	Original	Replacement
On/Off	 Power	OK Enter	 Ok
Mute	 Mute	Menu Right	 Right
Update	 Smart	Menu Off	 Exit
Reveal	 Media	Menu Down	 Down
Txt Stop	 Stop	Back	 Back
Subt.List	 Subt	Volume+	 Vol +
Sleep Timer	 Sleep	Chan.Up	 Ch +
Return TV	 TV/R	Volume-	 Vol -
Info	 +  Shift + Info	Menu audio	 Dual
Menu video	 D. Menu	Chan.Down	 Ch -
Text	 Text	1	 1
Txt Expand	 Eject	2	 2
TV/AV	 AV	3	 3
Menu	 Menu	4	 4
Menu Up	 Up	5	 5
Display	 Info	6	 6
Menu Left	 Left	7	 7



Original	Replacement	Original	Replacement
8	 8		
9	 9		
Guide -/-- 1.	 GUIDE		
0/10	 0		
2.Fav P/C 2.	 PRE-CH		
Red	 A		
Green	 B		
Blue	 D		
Mix Scan	 SHIFT +  TV/R		
Tone-	 <<		
Bright- Sys	 SHIFT +  CLEAR		
Contrast+	 SHIFT +  + CH		
Contrast-	 SHIFT +  CH -		
Nicam/Mono	 SHIFT +  B		
Tone+	 >>		
Level L	 SHIFT +  C		
Level R/Woofers	 SHIFT +  D		

