



Original		Replacement		Original		Replacement	
	RDS ASPM		D.Menu / Top		9		9
	Direct		Info / Angle		0		0
	RDS PTY		Text / Goto		+10		Guide / EPG / -/-
	On Screen		Smart / List		Memory /		Mute / Dimmer
	RDS Display		Setup / OPT /		Zoom		Zoom / Size
	Clear / Display		Display / Media		Subtitle		Subtitle / EQ
	Clear / Display		Exit / Cancel / Clear		Menu		Menu / Home
	On / Stand By		Power		Up / Tuning+		Shift + >> /
	1		1		Up / Tuning+		Up
	2		2		Return		Back / Return
	3		3		Left		Left
	Clock / Timer		Sleep / Timer		Enter		OK
	4		4		Right		Right
	5		5		>> / >> /		>> / Tune+
	6		6		I<< / << / Preset-		I<< / Preset-
	7		7		I<< / << / Preset-		<< / Tune-
	8		8		Down / Tuning-		Shift + << /

Tune-



