



 

 



 
 


 


 

 




 
 
 


 
 

 

 


 
 


 




 



 
 













 






Original		Replacement		Original		Replacement	
	Power 1		Power		5		5
	Power 2		Shift + Power		6		6
	Vol+		Vol +		7		7
	Vol-		Vol -		8		8
	Phono		Shift + 1		9		9
	CD		Shift + 2		0		0
	Tuner		Shift + 3		Mute		Mute
	Tape 3/VCR		Shift + 4		A. F/P		Pre Ch
	TV1/AUX2		Shift + 5		B. -/--		Guide
	DVD		Shift + 6		+		Ch +
	Tape 1		Shift + 7		-		Ch -
	Tape 2		Shift + 8		I<<		I<<
	TV		Shift + 9		>>I		>>I
	1		1		Mode		Format
	2		2		Memo		3D
	3		3		Text/1-Mode		Text
	4		4		Time/Mode-2		AV



 

 

 



 



 


 
 



 







 
 


 

 

 
 



 

 









 








Original	Replacement	Original	Replacement
			Guide
			Play
		>>I button"/>	>>I
			I<<
			>>
			<<
			Stop
			Pause
			Eject
			Format
			3D
			AV

 



 

 



 

 

 

 

 
 
 



 

 


 

 
 



 

 
 
 
 

 
 
 

 

 

 
 




 










Original	Replacement	Original	Replacement
 Power 1	 Power	 +	 Ch +
 Power 2	 Shift + Power	 -	 Ch -
 Vol+	 Vol +	 Play	 Play
 Vol-	 Vol -	 >>I	 >>I
 1	 1	 I<<	 I<<
 2	 2	 Stop	 Stop
 3	 3	 Pause	 Pause
 4	 4	 Open/Close	 Eject
 5	 5	 >>	 >>
 6	 6	 <<	 <<
 7	 7	 Mode	 Format
 8	 8	 Memo	 3D
 9	 9	 Time/Mode-2	 AV
 0	 0		
 Mute	 Mute		
 A. F/P	 Pre Ch		
 B. -/--	 Guide		





	Original	Replacement		Original	Replacement
	Power 1	 Power		A. F/P	 Pre Ch
	Power 2	 Shift + Power		B. -/--	 Guide
	Vol+	 Vol +		>>I	 >>I
	Vol-	 Vol -		I<<<	 I<<<
	Mute	 Mute		Play	 Play
	1	 1		<<<	 <<<
	2	 2		>>>	 >>>
	3	 3		Pause	 Pause
	4	 4		Stop	 Stop
	5	 5		Open/Close	 Eject
	6	 6		<>	 Rec
	7	 7		Mode	 Format
	8	 8		Memo	 3D
	9	 9		Text/1-Mode	 Text
	0	 0		Time/Mode-2	 AV
	+	 Ch +			
	-	 Ch -			

