


 












 



















Original	Replacement
 Power Receiver	 Power
 BD	 Yellow / YouTube / Repeat
 DVD	 2
 BDR / BDR	 AV / Input / RDS
 HDMI	 0
 SAT TV	 TV/Radio /
 CD	 3
 HMG	 Shift + AV / Input / RDS
 ADPT	 Eject / Surround
 iPod USB	 Shift + 8
 Tuner	 6
 Video	 4
 Input Select	 Shift + Left
 Input Select ~	 Shift + Right
 Master Volume	 Vol+
 Master Volume	 Vol-
Mute	Mute / Dimmer

Original	Replacement
 Top Menu	 D.Menu / Top
 Band	 Subtitle / EQ
 Audio	 Audio / Lang I/II
 Tune+	 Shift + >> /
 Up	 Up
 Tools	 Setup / OPT /
 T.Edit	 Text / Goto
 Video	 Picture / Format
 Left	 Left
 Preset -	 Shift + I<< / Preset-
 Enter	 OK
 Preset +	 Shift + >>I / Preset+
 Right	 Right
 iPod CTRL	 Smart / List
 Home Menu	 Menu / Home
 Tune-	 Shift + << /
Down	Down





Original	Replacement	Original	Replacement
Return	Back / Return	3 Tuner	Shift + 3
Repeat	Green / APP / Repeat	Audio DVD	Shift + Audio / Lang I/II
Random	Blue / Prime Video / Random	4 Tuner	Shift + 4
<<	<< / Tune-	Signal Sel	Shift + Setup / OPT / Tools
Phase CTRL	Red / Netflix / Search	MCACC	Shift + Blue / Prime
Play	Play / Slow	5 Tuner	5
>>	>> / Tune+	6 Tuner	Shift + 6
Status	Exit / Cancel / Clear	Sleep	Sleep / Timer
I<<	I<< / Preset-	Disp	Display / Media
Pause	Pause / Step / Freeze	7 Tuner	7
MPX	Zoom / Size	CH Level	Shift + CH+ /
PQLS	Shift + Menu /	8 Tuner	8
Stop	Stop / Hold	A.ATT.	Shift + Yellow / YouTube /
>>I	>>I / Preset+	9 Tuner	9
1 Tuner	1	Dimmer	Shift + Mute / Dimmer
S.Retriever	Shift + Text /	CH +	CH+ / Page+
2 Tuner	Shift + 2	D.Access	Shift + D.Menu / Top Menu









Original	Replacement	Original	Replacement
Power Source	Power	>>	>>  / Preset+
DVD	Shift + 2	1	1
Top Menu	D.Menu / Top	2	2
Up	Up	3	3
Left	Left	Audio	Audio / Lang I/II
Enter	Shift + OK	4	4
Enter	OK	5	5
Right	Right	6	6
Down	Down	7	7
Return	Back / Return	8	8
Menu	Menu / Home	9	9
<<	<< / Tune-	0	0
Play	Play / Slow		
>>	>> / Tune+		
I<<	I<< / Preset-		
Pause	Pause / Step / Freeze		
Stop	Stop / Hold		







Original		Replacement		Original		Replacement	
	Power Source		Power		3		3
	Tuner		Shift + 6		4		4
	Master Volume		Vol+		5		5
	Master Volume		Vol-		6		6
	Mute		Mute / Dimmer		Disp		Display / Media
	Band		Subtitle / EQ		7		7
	Tune+		>> / Tune+		8		8
	T.Edit		Text / Goto		9		9
	Preset-		I<< / Preset-		D.Access		D.Menu / Top
	Enter		OK		0		0
	Preset+		>>I / Preset+		Class		Shift + Display / Media
	Search		Red / Netflix / Search				
	Tune-		<< / Tune-				
	Menu		Menu / Home				
	MPX		Zoom / Size				
	1		1				
	2		2				

