 


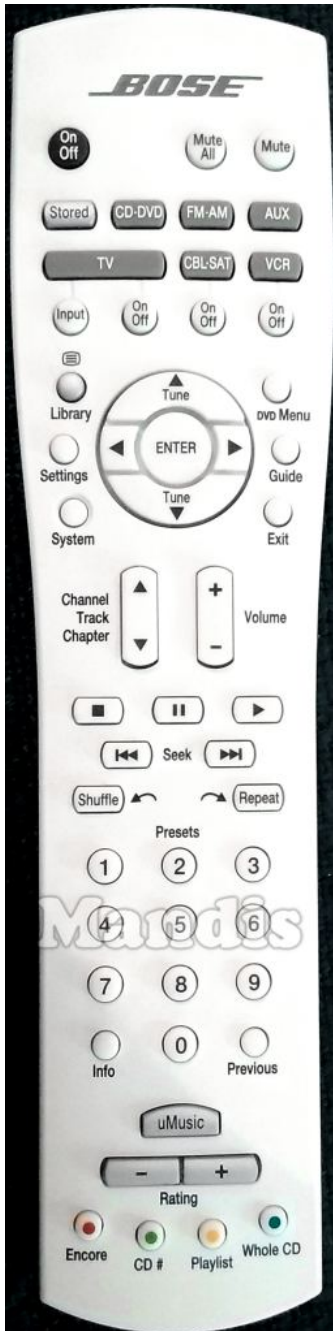








 



 





















Original	Replacement
 On / Off	 Power
 Mute All	 Shift + Mute / Dimmer
 Mute	 Mute / Dimmer
 Stored	 Smart / List
 CD - DVD	 Shift + 2
 FM - AM	 Shift + TV/Radio / Program
 AUX	 Shift + 7
 TV	 TV/Radio /
 CBL - SAT	 Eject / Surround
 VCR	 Shift + 4
 Library	 Shift + Display / Media
 Up / Tune +	 Up
 DVD Menu	 D.Menu / Top
 Settings	 Setup / OPT /
 Left	 Left
 Enter	 OK
 Right	 Right

Original	Replacement
 Guide	 Guide / EPG / -/--
 System	 Text / Goto
 Down / Tune -	 Down
 Exit	 Exit / Cancel / Clear
 Track/Chap./CH +	 CH+ / Page+
 Volume +	 Vol+
 Track/Chap./CH -	 CH- / Page-
 Volume -	 Vol-
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow
 I<< Seek	 I<< / Preset-
 >>I Seek	 >>I / Preset+
 Shuffle	 Blue / Prime Video / Random
 Repeat	 Green / APP / Repeat
 1	 1
 2	 2





	Original	Replacement		Original	Replacement
	3		3		
	4		4		
	5		5		
	6		6		
	7		7		
	8		8		
	9		9		
	Info		Info / Angle		
	0		0		
	Previous		Back / Return		
	uMusic		Shift + Smart / List		
	Rating-		Shift + Down		
	Rating+		Shift + Up		
	Encore		Menu / Home		
	CD #		Fav / Marker / PC		
	Playlist		Display / Media		
	Whole CD		Shift + 3		

