







| Original  | Replacement   | Original  | Replacement   |
|---|---|---|---|
|  Power     |  Power                       |  Rec       |  Rec / Rec Mode          |
|  Tv/Radio  |  TV/Radio /                  |  Stop      |  Stop / Hold             |
|  Red       |  Red / Netflix / Search      |  I<<       |  I<< / Preset-           |
|  Green     |  Green / APP / Repeat        |  FAV       |  Fav / Marker / PC       |
|  Yellow    |  Yellow / YouTube / Repeat   |  >>I/Index |  >>I / Preset+           |
|  Blue      |  Blue / Prime Video / Random |  Menu      |  Menu / Home             |
|  Subtitle  |  Subtitle / EQ               |  Up        |  Up                      |
|  Text      |  Text / Goto                 |  Source    |  AV / Input / RDS        |
|  Hold      |  Shift + Stop /              |  Left      |  Left                    |
|  TVG       |  Guide / EPG / -/--          |  OK        |  OK                      |
|  Audio    |  Audio / Lang I/II          |  Right    |  Right                  |
|  Play    |  Play / Slow               |  Down    |  Down                  |
|  Pause   |  Pause / Step / Freeze     |  Exit    |  Exit / Cancel / Clear |
|  Size    |  Zoom / Size               |  Aspect  |  Picture / Format      |
|  <<      |  << / Tune-                |  Vol+    |  Vol+                  |
|  Subpage |  Eject / Surround          |  Mute    |  Mute / Dimmer         |
|  >>      |  >> / Tune+                |  CH+     |  CH+ / Page+           |



