 



 
 

 
 




 









 
 


Original	Replacement
 Power On	 Power
 Standby	 Shift + Power
 DVI	 Shift + 1
 Display Port	 Shift + 2
 VGA	 Shift + 3
 RGB / HV	 Shift + 4
 HDMI	 Shift + 5
 DVD/HD	 Shift + 6
 VIDEO	 Shift + 7
 S-Video	 Shift + 8
 Picture Mode	 Shift + Format
 Aspect	 Format
 Sound	 Dual
 Option	 Options
 1	 1
 2	 2
 3	 3

Original	Replacement
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 --	 Shift + Guide
 ENT	 Pre Ch
 Display	 Info
 Menu	 Menu
 Up	 Up
 Left / -	 Left
 SET	 Ok
 Right / +	 Right
 Down	 Down
 Auto Set Up	 Smart





Original	Replacement	Original	Replacement
 Exit	 Exit		
 Vol+	 Vol +		
 Vol-	 Vol -		
 Guide	 Guide		
 Mute	 Mute		
 CH+	 Ch +		
 CH-	 Ch -		
 Still On/Off	 Stop		
 Still Capture	 Rec		
 [=]	 Text		
 PIP On/OFF	 Red		
 PIP Input	 Green		
 PIP Change	 Yellow		
 MTS	 Media		
 Audio Input	 AV		

