
 
 
 




 

 

 
 


 
 
 
 
 



 
 




 




 

 
 


Original	Replacement	Original	Replacement
On/Off	 Power	Menu Off	 Exit
Mute	 Mute	Back	 Back
Update	 Smart	Volume+	 Vol +
Txt Stop	 Stop	Chan.Up	 Ch +
Reveal	 Media	Volume-	 Vol -
Info	 +  Shift + Info	Menu audio	 Dual
Subt.List	 Subt	Chan.Down	 Ch -
Sleep Timer	 Sleep	1	 1
Return TV	 TV/R	2	 2
Menu video	 D. Menu	3	 3
Text	 Text	4	 4
Txt Expand	 Eject	5	 5
Menu	 Menu	6	 6
Display	 Info	7	 7
Menu Left	 Left	8	 8
OK Enter	 Ok	9	 9
Menu Right	 Right	Guide -/-- 1.	 Guide



Original	Replacement	Original	Replacement
0/10	 0		
2.Fav P/C 2.	 Pre Ch		
Blue	 Blue		
Mix Scan	 +  Shift + TV/R		
Color+ P.Std	 +  Shift + Dual		
Bright+ Mode	 List		
Disp	 3D		
Tune-	 <<		
Tune+	 >>		
Bright- Sys	 Options		
Contrast+	 Up		
Color- S.Std	 Format		
Contrast-	 Down		
Surround	 Red		

