




 



 










 




 






 




















Original	Replacement	Original	Replacement
 Power	 Power	 Vol+	 Vol +
 AUDIO	 Red	 Vol-	 Vol -
 CD	 Green	 Auto	 Subt
 AUX	 Yellow	 DSP -	 Shift + Left
 TV	 Blue	 DSP +	 Shift + Right
 VCR	 Shift + Red	 Stereo	 Dual
 DVD	 Shift + Green	 Setup / OSD	 Options
 CABLE	 Shift + Yellow	 Menu / T.Tone	 Menu
 SAT	 Shift + Blue	 Up	 Up
 CH Sel	 TV/R	 Left	 Left
 CH/Level Up	 Ch +	 Enter	 Ok
 CH/Level Down	 Ch -	 Right	 Right
 SPK SET	 Exit	 Down	 Down
 PLII PARA.	 D. Menu	 Display / Sleep	 Info
 Adjust -	 Shift + Down	 Display / Sleep	 Sleep
 Adjust +	 Shift + Up	 Return /	 Back
 Mute	 Mute	 Stop / P.Scan	 Stop





Original	Replacement	Original	Replacement
 << / Tune -	 <<	 AUX Pause	 Shift + Pause
 >> / Tune +	 >>	 AUX Play	 Shift + Play
 I<< / Preset -	 I<<	 AUX Stop	 Shift + Stop
 >>I / Preset +	 >>I	 AUX <<	 Shift + <<
 7CH Dir	 ECO 3D	 AUX >>	 Shift + >>
 1 / Tuner	 1	 AUX >>I	 Shift + >>I
 2 / CD	 2	 AUX I<<	 Shift + I<<
 3 / AUX	 3		
 4 / Tape	 4		
 5	 5		
 6 / Video 1	 6		
 7 / Video 2	 7		
 8 / Video 3	 8		
 9	 9		
 0	 0		
 AUX Power /	 SHIFT + 		
 AUX Rec	 SHIFT + 		




 





 









Original	Replacement	Original	Replacement
 AUDIO	 Red	 TV 3	 3
 CD	 Green	 TV 4	 4
 AUX	 Yellow	 TV 5	 5
 TV	 Blue	 TV 6	 6
 VCR	 Shift + Red	 TV 7	 7
 DVD	 Shift + Green	 TV 8	 8
 CABLE	 Shift + Yellow	 TV 9	 9
 SAT	 Shift + Blue	 TV 0	 0
 TV Power	 Power	 CABLE Power	 Shift + Power
 TV CH +	 Ch +	 CABLE CH/Level +	 Shift + Ch +
 TV CH -	 Ch -	 CABLE CH/Level -	 Shift + Ch -
 TV CH Sel.	 Media	 CABLE CH Sel.	 Shift + Smart
 TV Mute	 Mute	 CABLE Mute	 Shift + Mute
 TV Volume +	 Vol +	 CABLE Volume	 Shift + Vol +
 TV Volume -	 Vol -	 CABLE Volume -	 Shift + Vol -
 TV 1	 1	 CABLE 1	 Shift + 1
 TV 2	 2	 CABLE 2	 Shift + 2


 









 













 
 
 
 

 
 

 

 

 

 

 

 





 









 












Original	Replacement	Original	Replacement
 CABLE 3	 Shift + 3		
 CABLE 4	 Shift + 4		
 CABLE 5	 Shift + 5		
 CABLE 6	 Shift + 6		
 CABLE 7	 Shift + 7		
 CABLE 8	 Shift + 8		
 CABLE 9	 Shift + 9		
 CABLE 0	 Shift + 0		

 







 
 
 
 

 
 






 






Original	Replacement	Original	Replacement
 AUDIO	 Red	 DVD Right	 Right
 CD	 Green	 DVD Down	 Down
 AUX	 Yellow	 DVD Display	 Info
 TV	 Blue	 DVD Pause	 Pause
 VCR	 Shift + Red	 DVD Play	 Play
 DVD	 Shift + Green	 DVD Stop	 Stop
 SAT	 Shift + Blue	 DVD <<	 <<
 CABLE	 Shift + Yellow	 DVD >>	 >>
 DVD Power	 Power	 DVD I<<	 I<<
 DVD Menu	 Menu	 DVD >>I	 >>I
 DVD Audio Sel.	 Dual	 DVD 1	 1
 DVD Subtitle	 Subt	 DVD 2	 2
 DVD Zoom	 3D	 DVD 3	 3
 DVD OSD /	 Format	 DVD 4	 4
 DVD Up	 Up	 DVD 5	 5
 DVD Left	 Left	 DVD 6	 6
 DVD Enter	 Ok	 DVD 7	 7


 




 
 
 




 

 
 


 


 
 

 








 


 

 





 


 






Original		Replacement		Original		Replacement	
	DVD 8		8		SAT 8		Shift + 8
	DVD 9		9		SAT 9		Shift + 9
	DVD 0		0		SAT 0		Shift + 0
	SAT Power		Shift + Power				
	SAT CH +		Shift + Ch +				
	SAT CH -		Shift + Ch -				
	SAT CH Sel.		Shift + Media				
	SAT Mute		Shift + Mute				
	SAT Volume +		Shift + Vol +				
	SAT Volume -		Shift + Vol -				
	SAT 1		Shift + 1				
	SAT 2		Shift + 2				
	SAT 3		Shift + 3				
	SAT 4		Shift + 4				
	SAT 5		Shift + 5				
	SAT 6		Shift + 6				
	SAT 7		Shift + 7				





Original	Replacement	Original	Replacement
	 Red		 5
	 Green		 6
	 Yellow		 7
	 Blue		 8
	 Shift + Red		 9
	 Shift + Blue		 0
	 Shift + Yellow		 Shift + Power
	 Shift + Green		 Shift + Media
	 Pause		 Shift + Rec
	 Play		 Shift + Play
	 Stop		 Shift + Mute
	 I<<		 Shift + >>
	 >>I		 Shift + <<
	 1		 Shift + Vol -
	 2		 Shift + Vol +
	 3		 Shift + Ch +
	 4		 Shift + Ch -





Original	Replacement
 VCR Pause	 Shift + Pause
 VCR Stop	 Shift + Stop
 VCR 1	 Shift + 1
 VCR 2	 Shift + 2
 VCR 3	 Shift + 3
 VCR 4	 Shift + 4
 VCR 5	 Shift + 5
 VCR 6	 Shift + 6
 VCR 7	 Shift + 7
 VCR 8	 Shift + 8
 VCR 9	 Shift + 9
 VCR 0	 Shift + 0

Original	Replacement

