 















 

 
 


 



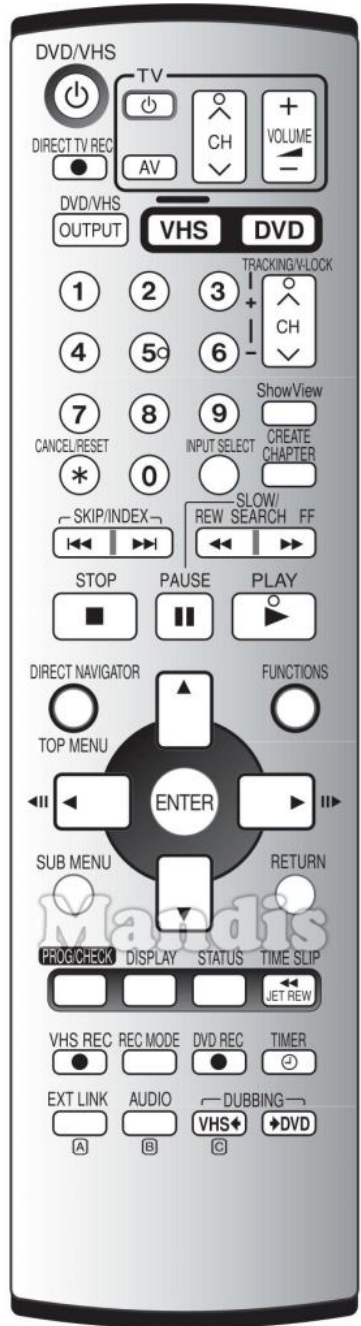 


 
Original		Replacement		Original		Replacement	
	VHS/DVD Power		Power		Create Chapter		TV/R
	Direct TV Rec		Subt		I<< Skip		I<<
	VHS/DVD		Smart		Skip >>I		>>I
	1		1		REW / << Slow/Search		<<
	2		2		FF / Slow/Search		>>
	3		3		Stop		Stop
	4		4		Pause		Pause
	5		5		Play		Play
	6		6		Direct Navigator / Top Menu		D. Menu
	7		7		Functions		List
	8		8		Up		Up
	9		9		Left		Left
	0		0		Enter		Ok
	Cancel / Reset		Exit		Right		Right
	Input Select		Guide		Down		Down
	CH+ / Tracking/V-Lock+		Ch +		Sub Menu		Menu
	CH- / Tracking/V-Lock-		Ch -		Return		Back





 
Original		Replacement		Original		Replacement	
	Prog / Check		Sleep				
	Display		Info				
	Status		Media				
	Time Slip		Vol +				
	Timer		AV				
	Ext Link		3D				
	Audio / B		Dual				
	Dubbing		Blue				



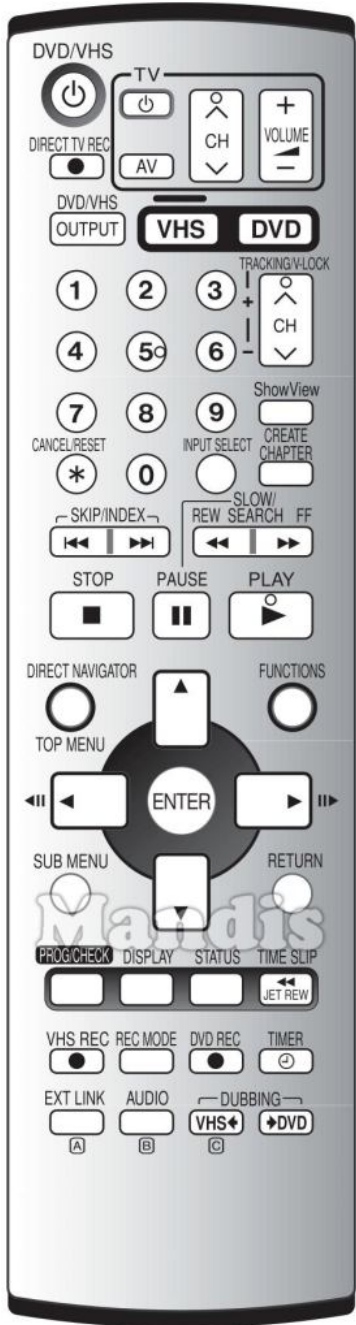




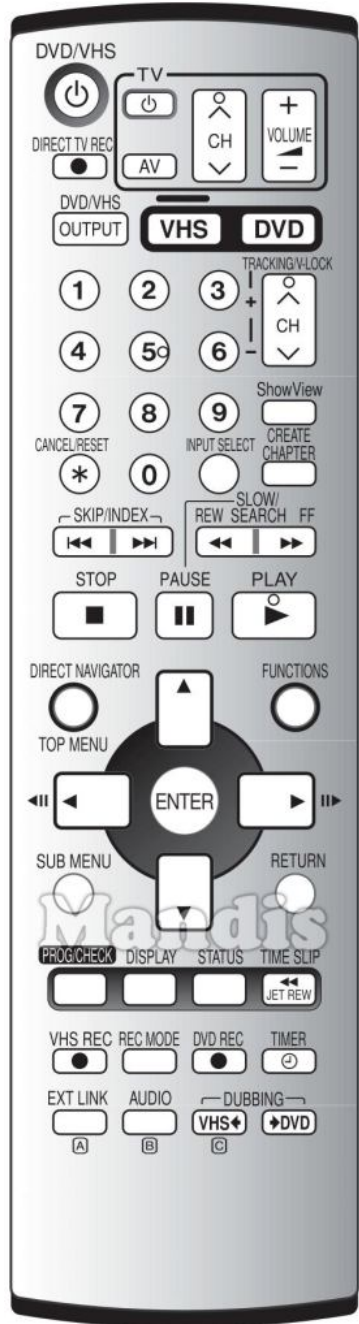 
	Original	Replacement	Original	Replacement
	Power			
	AV			
	Volume+			
	Volume-			
	CH+			
	CH-			

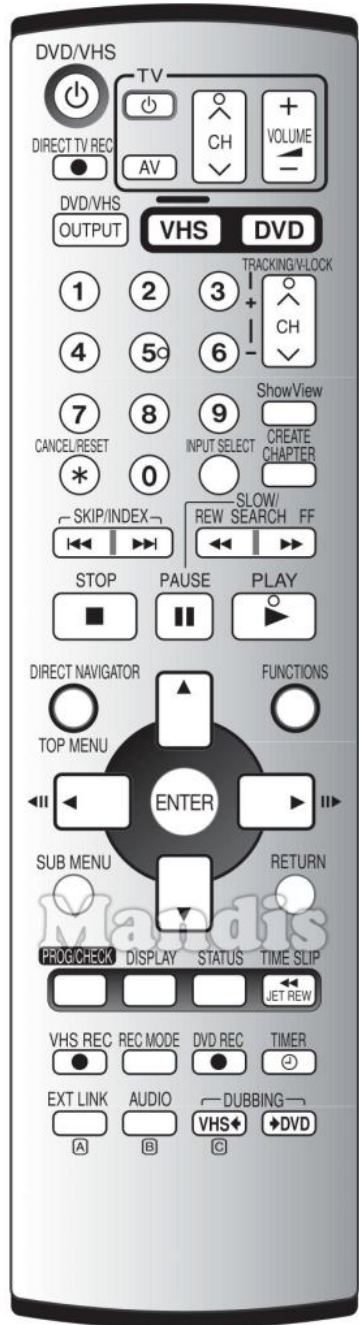
 






 
 


 
 




	Original	Replacement		Original	Replacement
	VHS/DVD Power		Power		ShowView
	Direct TV Rec		Subt		I<< Index
	VHS/DVD		Smart		Index >>I
	1		1		REW
	2		2		FF
	3		3		Stop
	4		4		Pause
	5		5		Play
	6		6		Up
	7		7		Left
	8		8		Enter
	9		9		Right
	0		0		Down
	Cancel / Reset		Exit		Return
	Input Select		AV		Prog/Check
	CH+ / Tracking/V-Lock+		Ch +		Display
	CH- / Tracking/V-Lock-		Ch -		Jet Rew
					Media
					I<<
					I>>
					I<<
					I>>
					Stop
					Pause
					Play
					Up
					Left
					Ok
					Right
					Down
					Back
					Sleep
					Info
					Shift + I<<





	Original	Replacement	Original	Replacement
 VHS REC	Rec	 REC MODE	Rec	
 REC MODE	Rec Mode	 SHIFT +  REC MODE	Shift + Rec	
 TIMER	Timer	 SHIFT +  TIMER AV	Shift + AV	
 EXT LINK	A / Ext Link	 A	Red	
 AUDIO	Audio / B	 SOUND DUAL	Dual	
 VHS DUBBING	Dubbing	 E-MANUAL D.MENU	D. Menu	

