


 


 

 

 

 







 





 

 









 

 




 



 

 

 



 



 








Original	Replacement	Original	Replacement
 On	 Power	 Left	 Left
 Standby	 Shift + Power	 Enter	 Ok
 Open/Close	 Eject	 Play	 Play
 Angle	 Red	 Stop	 Stop
 Audio	 Dual	 Pause	 Pause
 Subtitle	 Subt	 >>	 >>
 Dimmer	 Blue	 <<	 <<
 Last M	 Smart	 >> /Up	 >>
 Cond M	 Media	 <</Down	 <<
 Display	 Info	 Step/Slow+	 Ch +
 Menu	 Menu	 Step/Slow-	 Ch -
 Return	 Back	 Function M	 D. Menu
 Setup	 Options	 Clear	 Exit
 Top Menu	 Shift + Menu	 Search	 TV/R
 Up	 Up	 Repeat	 Text
 Down	 Down	 A-B	 Green
 Right	 Right	 Program	 Sleep





	Original	Replacement		Original	Replacement
	1		1		
	2		2		
	3		3		
	4		4		
	5		5		
	6		6		
	7		7		
	8		8		
	9		9		
	0		0		
	+10		Guide		
	Random		Format		

	Original	Replacement		Original	Replacement

