


 
 
 

 

 

 

 










 
 



 




 





 


 


 
 

 
 
 

 

 

 

 
 











Original		Replacement		Original		Replacement	
	Power		Power		Menu		Menu
	Open / Close		Eject		Setup		Options
	VCR		Media		Up / PR+		Up
	DVD		Smart		Up / PR+		Ch +
	Input		AV		Down / PR-		Down
	1 / Tracking -		1		Down / PR-		Ch -
	2		2		Right		Right
	3 / Tracking +		3		Left		Left
	4		4		Enter		Ok
	5		5		Timer		Shift + AV
	6		6		Display		Info
	7		7		Rec		Rec
	8		8		Rec Mode		Shift + Rec
	9		9		Subtitle		Subt
	0		0		Audio		Dual
	TV / VCR		TV/R		<< REW		<<
	Clear		Exit		Play/Pause		Pause





Original	Replacement	Original	Replacement
 Play/Pause	 Play		
 FF >>	 >>		
 I<< Prev	 I<<		
 Stop	 Stop		
 Next >>I	 >>I		
 Skip	 Back		
 Title	 List		
 Slow -	 Vol -		
 Slow +	 Vol +		
 Repeat	 Text		
 A-B	 Shift + Text		
 Zoom	 Shift + Eject		
 Angle	 Format		

