


 
















 
 

 








Original	Replacement	Original	Replacement
 Power	 Power	 Blue / SMode	 Shift + Dual
 Mute	 Mute	 Blue / SMode	 Shift + Blue
 Exit	 Exit	 Up	 Up
 Text	 Text	 Left	 Left
 Audio I/II	 Dual	 Enter	 Ok
 Display	 Info	 Right	 Right
 Sleep	 Sleep	 Down	 Down
 P+	 Ch +	 1	 1
 P-	 Ch -	 2	 2
 V+	 Vol +	 3	 3
 V-	 Vol -	 4	 4
 Red / Source	 AV	 5	 5
 Red / Source	 Shift + Red	 6	 6
 Green / TV	 Menu	 7	 7
 Green / TV	 Shift + Green	 8	 8
 Yellow / PMode	 Format	 9	 9
 Yellow / PMode	 Shift + Yellow	 0	 0





Original	Replacement	Original	Replacement
	-/=/>		Stop / FAV -
	SHIFT + Shift + Guide		SHIFT + Shift + Left
	Back		<< / FAV
	Red		<< / FAV
	Green		>> / FAV+
	Yellow		>> / FAV+
	Blue		SHIFT + Shift + Right
	SHIFT + Shift + Text		EPG
	Subt		Guide
	Play		USB/SD
	Pause		Recorder
	3D		CH.List
	D. Menu		TV / Radio
	SHIFT + Shift + Info		
	Eject		
	I<<		
	>>I		
	Stop		

