


 




 



 
 


 
 

 
 


 



 









 



 





 



 






 


 





 



 

 






| | Original | Replacement | | Original | Replacement |
|--|---|--|--|---|---|
| |  Standby |  Power | |  Freeze |  Pause |
| |  Info |  Info | |  TV/Radio |  TV/R |
| |  Mute |  Mute | |  FAV |  Pre Ch |
| |  P.Mode |  Format | |  Source |  AV |
| |  S.Mode |  Dual | |  Recall |  Back |
| |  Zoom |  Shift + Eject | |  CH List |  List |
| |  Sleep |  Sleep | |  Up |  Up |
| |  1 |  1 | |  Left |  Left |
| |  2 |  2 | |  OK |  Ok |
| |  3 |  3 | |  Right |  Right |
| |  4 |  4 | |  Down |  Down |
| |  5 |  5 | |  Vol+ |  Vol + |
| |  6 |  6 | |  Vol- |  Vol - |
| |  7 |  7 | |  CH+ |  Ch + |
| |  8 |  8 | |  CH- |  Ch - |
| |  9 |  9 | |  LCD Menu |  Menu |
| |  0 |  0 | |  EPG / DVD |  Guide |





| Original | Replacement |
|---|--|
|  EPG / DVD |  D. Menu |
|  Audio |  Shift + Dual |
|  Exit / DVD Setup |  Exit |
|  Exit / DVD Setup |  Options |
|  TXT |  Text |
|  Index / Angle |  Smart |
|  Size |  3D |
|  Subtitle |  Subt |
|  Mix / Open/Close |  Shift + Text |
|  Mix / Open/Close |  Eject |
|  Play/Pause / |  Play |
|  Stop / Hold |  Stop |
|  A-B / Subpage |  Media |
|  << / Red |  Red |
|  << / Red |  << |
|  >> / Green |  >> |
|  >> / Green |  Green |

| Original | Replacement |
|--|--|
|  I<< / Yellow |  I<< |
|  I<< / Yellow |  Yellow |
|  >>I / Blue |  >>I |
|  >>I / Blue |  Blue |

