 






 


 



 

 



 

 

 















 

 



 

 

 





 







Original	Replacement	Original	Replacement
	Audio		Audio / Lang I/II
	[ ]		Picture / Format
	Power		Power
	PIP		Zoom / Size
	V=		D.Menu / Top
	[≡  ]		Guide / EPG / -/--
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Pause/T		Pause / Step / Freeze
	M		Menu / Home
	E		Exit / Cancel / Clear
	Info		Info / Angle
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Red		Red / Netflix / Search
	Blue		Blue / Prime Video / Random
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat















 


 
Original	Replacement
 Audio	 Audio / Lang I/II
 [ ]	 Picture / Format
 Power	 Power
 SV/[ *]	 Zoom / Size
 LP/V=	 Setup / OPT /
 000/[≡I ]	 Guide / EPG / -/--
 Timer/Mute	 Sleep / Timer
 Timer/Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9

Original	Replacement
 0	 0
 Pause/T	 Pause / Step / Freeze
 M	 Menu / Home
 E	 Exit / Cancel / Clear
 Rec/i	 Info / Angle
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 <<	 << / Tune-
 >>	 >> / Tune+
 Stop	 Stop / Hold
 Play	 Play / Slow







Original	Replacement
	Audio / Lang I/II
	Picture / Format
	Power
	Display / Media
	Smart / List
	TV/Radio /
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	Menu / Home

Original	Replacement
	Exit / Cancel / Clear
	Rec / Rec Mode
	Up
	Left
	OK
	Right
	Down
	<< / Tune-
	>> / Tune+
	Stop / Hold
	Play / Slow

