 


 
 










 



 



 

















 

 







 



 






 
 








Original		Replacement		Original		Replacement	
	Power		Power		Display		Info
	Auto / Eject		Eject		CH+		Ch +
	1		1		CH-		Ch -
	2		2		Up		Up
	3		3		Left		Left
	4		4		Enter		Ok
	5		5		Right		Right
	6		6		Down		Down
	7		7		Menu		D. Menu
	8		8		LCD Menu		Menu
	9		9		DVD Setup		Options
	0		0		Input		AV
	-/--		Guide		P.Mode		Format
	Back		Back		A.Mode		Dual
	Vol+		Vol +		Mute		Mute
	Vol-		Vol -		Play / Pause		Play
	Title		Smart		Stop		Stop





Original	Replacement
Slow / Step	Pause
Audio / Nicam	+ Shift + Dual
Text / <<	Text
Text / <<	<<
>> / Mix	>>
Hold / Goto	+ Shift + Stop
Picture / Subtitle	+ Shift + Format
I<< / Index	I<<
>>I / Size	>>I
Reveal / Zoom	+ Shift + Eject
Subpage /	+ Shift + Subt
Picture / Subtitle	Subt
Red / Program	Red
Green / Intro	Green
Yellow / Repeat	Yellow
Blue / A-B	Blue

Original	Replacement

