 

 
 

 

 








 














 














 









	Original	Replacement		Original	Replacement
	Power		Power		XTS Pro
	Open/Close		Eject		D. Menu
	Band		Red		Format
	DVD		Green		TV/R
	AUX		Yellow		O)))/Audio
	USB		Blue		[...] /Subtitle
	VSM		Pre Ch		Sound
	1		1		Return
	2		2		Setup
	3		3		Display
	4		4		Up/Preset+
	5		5		Down/Preset-
	6		6		Right/Tun+
	7		7		Left/Tun-
	8		8		Enter
	9		9		Menu
	0		0		Title
					<</Scan-





Original	Replacement
>>/Scan+	>>
Play	Play
I<</Skip-	I<<
>>/Skip+	>>I
Pause/Step	Pause
Repeat	Text
Repeat A-B	Shift + Play
Stop	Stop
Vol+	Vol +
Vol-	Vol -
Mute	Mute
Prog/Memo	Media
Clear	Exit
Zoom	Shift + Eject
RDS	Guide
Sleep	Sleep
PTY	Smart

Original	Replacement
Dimmer	3D
Power Tv	Shift + Power
CH+ Tv	Ch +
CH- Tv	Ch -
Vol+ Tv	Shift + Right
Vol- Tv	Shift + Left
Mute Tv	Shift + Mute
Input Tv	AV

