




 




| Original |                         | Replacement |                          | Original |                | Replacement |                       |
|----------|-------------------------|-------------|--------------------------|----------|----------------|-------------|-----------------------|
|          | On / Standby            |             | Power                    |          | CH/Disc/Album- |             | CH- / Page-           |
|          | Input Selector V1       |             | 1                        |          | Vol-           |             | Vol-                  |
|          | Input Selector V2       |             | 4                        |          | Guide/Top      |             | Guide / EPG / -/-     |
|          | Input Selector V3       |             | 7                        |          | Guide/Top      |             | D.Menu / Top          |
|          | Input Selector Multi CH |             | 8                        |          | Up             |             | Up                    |
|          | Input Selector          |             | 2                        |          | Muting         |             | Mute / Dimmer         |
|          | Input Selector          |             | 5                        |          | Left           |             | Left                  |
|          | Input Selector Tuner    |             | 6                        |          | Enter          |             | OK                    |
|          | Input Selector CD       |             | 3                        |          | Right          |             | Right                 |
|          | Dimmer                  |             | Shift + Mute / Dimmer    |          | Return         |             | Back / Return         |
|          | Sleep                   |             | Sleep / Timer            |          | Down           |             | Down                  |
|          | Power Tv                |             | Shift + Power            |          | Setup          |             | Setup / OPT /         |
|          | Vol+ Tv                 |             | Shift + Vol+             |          | Pause          |             | Pause / Step / Freeze |
|          | CH/Disc/Album           |             | CH+ / Page+              |          | Play           |             | Play / Slow           |
|          | Vol+                    |             | Vol+                     |          | Stop           |             | Stop / Hold           |
|          | Input Tv                |             | Shift + AV / Input / RDS |          | <<             |             | << / Tune-            |
|          | Vol- Tv                 |             | Shift + Vol-             |          | >>             |             | >> / Tune+            |





| Original  | Replacement   | Original | Replacement |
|---|---|----------|-------------|
|  I<<                     |  I<< / Preset-               |          |             |
|  >>I                     |  >>I / Preset+               |          |             |
|  Listening Mode Stereo   |  Subtitle / EQ               |          |             |
|  Listening Mode Surround |  Eject / Surround            |          |             |
|  Listening Mode <        |  Sound / Title               |          |             |
|  Listening Mode >        |  Audio / Lang I/II           |          |             |
|  Test Tone               |  Red / Netflix / Search      |          |             |
|  CH Sel                  |  Green / APP / Repeat        |          |             |
|  Level-                  |  Yellow / YouTube / Repeat   |          |             |
|  Level+                  |  Blue / Prime Video / Random |          |             |
|  Display                |  Display / Media            |          |             |
|  L.Night               |  Zoom / Size               |          |             |
|  Cine FLTR             |  Picture / Format          |          |             |
|   |   |          |             |
|   |   |          |             |
|   |   |          |             |
|   |   |          |             |
|   |   |          |             |
|   |   |          |             |





| Original             | Replacement           |
|----------------------|-----------------------|
| Power                | Power                 |
| 1                    | 1                     |
| 2                    | 2                     |
| 3                    | 3                     |
| 4                    | 4                     |
| 5                    | 5                     |
| 6                    | 6                     |
| 7                    | 7                     |
| 8                    | 8                     |
| 9                    | 9                     |
| +10/10/-/-           | Guide / EPG / -/-     |
| 0/11                 | 0                     |
| CLR                  | Exit / Cancel / Clear |
| Top Menu             | D.Menu / Top          |
| Up                   | Up                    |
| Previous Menu/Muting | Menu / Home           |
| Previous Menu/Muting | Mute / Dimmer         |

| Original           | Replacement               |
|--------------------|---------------------------|
| Left/Playlist/Cat- | Left                      |
| Enter              | OK                        |
| Right/Playlist/Cat | Right                     |
| Return             | Back / Return             |
| Down               | Down                      |
| Setup              | Setup / OPT /             |
| Pause              | Pause / Step / Freeze     |
| Play               | Play / Slow               |
| Stop               | Stop / Hold               |
| <<                 | << / Tune-                |
| >>                 | >> / Tune+                |
| I<<                | I<< / Preset-             |
| >>I                | >>I / Preset+             |
| Stereo             | Shift + Subtitle / EQ     |
| Surround           | Shift + Eject / Surround  |
| < Listening Mode   | Shift + Sound / Title     |
| Listening Mode >   | Shift + Audio / Lang I/II |





| Original      | Replacement                 | Original | Replacement |
|---------------|-----------------------------|----------|-------------|
| Audio         | Audio / Lang I/II           |          |             |
| Subtitle      | Subtitle / EQ               |          |             |
| Random        | Blue / Prime Video / Random |          |             |
| Repeat        | Green / APP / Repeat        |          |             |
| Display       | Display / Media             |          |             |
| VCR           | Shift + 4                   |          |             |
| Play Mode VCR | Picture / Format            |          |             |
| DVD           | Shift + 2                   |          |             |
| HDD           | Shift + 7                   |          |             |
|               |                             |          |             |
|               |                             |          |             |
|               |                             |          |             |
|               |                             |          |             |
|               |                             |          |             |
|               |                             |          |             |
|               |                             |          |             |
|               |                             |          |             |
|               |                             |          |             |
|               |                             |          |             |
|               |                             |          |             |
|               |                             |          |             |
|               |                             |          |             |
|               |                             |          |             |
|               |                             |          |             |
|               |                             |          |             |





| Original     | Replacement       | Original         | Replacement                 |
|--------------|-------------------|------------------|-----------------------------|
| On / Standby | Power             | Pause            | Pause / Step / Freeze       |
| 1            | 1                 | Play             | Play / Slow                 |
| 2            | 2                 | Stop             | Stop / Hold                 |
| 3            | 3                 | << / Tune-       | << / Tune-                  |
| 4            | 4                 | >> / Tune+       | >> / Tune+                  |
| 5            | 5                 | I<< / Preset-    | I<< / Preset-               |
| 6            | 6                 | >>I / Preset+    | >>I / Preset+               |
| 7            | 7                 | Stereo           | Subtitle / EQ               |
| 8            | 8                 | Surround         | Eject / Surround            |
| 9            | 9                 | < Listening Mode | Sound / Title               |
| +10/10/-/-   | Guide / EPG / -/- | Listening Mode > | Audio / Lang I/II           |
| 0/11         | 0                 | Random           | Blue / Prime Video / Random |
| 12           | Fav / Marker / PC | Repeat           | Green / APP / Repeat        |
| Disc+        | CH+ / Page+       | Display          | Display / Media             |
| Vol+         | Vol+              |                  |                             |
| Disc-        | CH- / Page-       |                  |                             |
| Vol-         | Vol-              |                  |                             |

| Original     | Replacement       | Original         | Replacement                 |
|--------------|-------------------|------------------|-----------------------------|
| On / Standby | Power             | Pause            | Pause / Step / Freeze       |
| 1            | 1                 | Play             | Play / Slow                 |
| 2            | 2                 | Stop             | Stop / Hold                 |
| 3            | 3                 | << / Tune-       | << / Tune-                  |
| 4            | 4                 | >> / Tune+       | >> / Tune+                  |
| 5            | 5                 | I<< / Preset-    | I<< / Preset-               |
| 6            | 6                 | >>I / Preset+    | >>I / Preset+               |
| 7            | 7                 | Stereo           | Subtitle / EQ               |
| 8            | 8                 | Surround         | Eject / Surround            |
| 9            | 9                 | < Listening Mode | Sound / Title               |
| +10/10/-/-   | Guide / EPG / -/- | Listening Mode > | Audio / Lang I/II           |
| 0/11         | 0                 | Random           | Blue / Prime Video / Random |
| 12           | Fav / Marker / PC | Repeat           | Green / APP / Repeat        |
| Disc+        | CH+ / Page+       | Display          | Display / Media             |
| Vol+         | Vol+              |                  |                             |
| Disc-        | CH- / Page-       |                  |                             |
| Vol-         | Vol-              |                  |                             |





| Original |            | Replacement |                       | Original |                  | Replacement |                   |
|----------|------------|-------------|-----------------------|----------|------------------|-------------|-------------------|
|          | Power      |             | Power                 |          | <<               |             | << / Tune-        |
|          | 1          |             | 1                     |          | Stereo           |             | Subtitle / EQ     |
|          | 2          |             | 2                     |          | Surround         |             | Eject / Surround  |
|          | 3          |             | 3                     |          | < Listening Mode |             | Sound / Title     |
|          | 4          |             | 4                     |          | Listening Mode > |             | Audio / Lang I/II |
|          | 5          |             | 5                     |          | Play Mode        |             | D.Menu / Top      |
|          | 6          |             | 6                     |          | L.Night          |             | Sleep / Timer     |
|          | 7          |             | 7                     |          |                  |             |                   |
|          | 8          |             | 8                     |          |                  |             |                   |
|          | 9          |             | 9                     |          |                  |             |                   |
|          | +10/10/-/- |             | Guide / EPG / -/-     |          |                  |             |                   |
|          | 0/11       |             | 0                     |          |                  |             |                   |
|          | CH+        |             | CH+ / Page+           |          |                  |             |                   |
|          | CH-        |             | CH- / Page-           |          |                  |             |                   |
|          | Pause      |             | Pause / Step / Freeze |          |                  |             |                   |
|          | Play       |             | Play / Slow           |          |                  |             |                   |
|          | Stop       |             | Stop / Hold           |          |                  |             |                   |

