
 


 













Original	Replacement
	Power
	Mute
	P.Mode
	S.Mode
	FAV
	Sleep
	1
	2
	3
	4
	5
	6
	7
	8
	9
	Shift + Guide / EPG / -/--
	0

Original	Replacement
	Back
	Vol+
	CH List
	CH+ / Page+
	Vol-
	Aspect
	CH- / Page-
	EPG
	Audio
	Rec
	Menu
	Up
	Exit
	Left
	Enter
	Right
	Source





Original		Replacement		Original		Replacement	
	Down		Down		Hold		Shift + Stop /
	Display		Display / Media		Subpage		Eject / Surround
	Red		Red / Netflix / Search		Subtitle		Subtitle / EQ
	<<		<< / Tune-				
	Green		Green / APP / Repeat				
	>>		>> / Tune+				
	Yellow		Yellow / YouTube / Repeat				
	l<<		l<< / Preset-				
	Blue		Blue / Prime Video / Random				
	>>l		>>l / Preset+				
	Text		Text / Goto				
	Stop		Stop / Hold				
	Play		Play / Slow				
	Pause		Pause / Step / Freeze				
	Index		Info / Angle				
	Size		Zoom / Size				
	Reveal		D.Menu / Top				

