







 



 







 



 





 







 

 



 

 

 

 







 













Original		Replacement		Original		Replacement	
	Power		Power		Vol-		Vol-
	Micro		Smart / List		Mute		Mute / Dimmer
	Up		Up		Down		CH- / Page-
	Left		Left		1		1
	OK		OK		2		2
	Right		Right		3		3
	Down		Down		4		4
	Back		Back / Return		5		5
	Home		Menu / Home		6		6
	≡		Setup / OPT /		7		7
	<<		<< / Tune-		8		8
	Play		Play / Slow		9		9
	Pause		Pause / Step / Freeze		Subt		Subtitle / EQ
	>>		>> / Tune+		0		0
	Vol+		Vol+		TXT		Text / Goto
	Guide		Guide / EPG / -/-		prime video		Shift + Blue / Prime
	CH+		CH+ / Page+		Netflix		Shift + Red / Netflix / Search





Original	Replacement
 DAZN	 Display / Media
 Tv NOW	 TV/Radio /
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random

Original	Replacement

