







 



 



 











 



 







 







 



 



















Original	Replacement	Original	Replacement
 Power Off	 Shift + Power	 Stop	 Stop / Hold
 Power	 Power	 Play	 Play / Slow
 DVD	 2	 I<</Volume-	 I<< / Preset-
 VDP	 Shift + 2	 >>I/Volume+	 >>I / Preset+
 Tuner	 6	 Pause	 Pause / Step / Freeze
 Shift	 Smart / List	 </Disc Skip+	 Rec / Rec Mode
 TV/DBS	 1	 Dolby/DTS	 Zoom / Size
 V.AUX	 7	 Direct	 Audio / Lang I/II
 Phono	 9	 Master Vol+	 Vol+
 Channel+	 CH+ / Page+	 DSP Simulation	 Picture / Format
 VCR-1	 4	 5CH / 7CH Stereo	 Subtitle / EQ
 CD	 3	 Stereo	 Sound / Title
 MD/Tape-1	 5	 Master Vol-	 Vol-
 Channel-	 CH- / Page-	 Input Mode	 Red / Netflix / Search
 VCR-2	 Shift + 4	 Input Analog	 Green / APP / Repeat
 <<	 << / Tune-	 Ext. In	 Yellow / YouTube / Repeat
 >>	 >> / Tune+	 Muting	 Mute / Dimmer





Original	Replacement
Tuning Down	Shift + << /
Tuning Up	Shift + >> /
System Setup	Setup / OPT /
Up	Up
Surround	Eject / Surround
Band	Shift + Stop /
Enter	OK
CH Select	Menu / Home
Mode Tuner	Shift + Play /
Left	Left
Right	Right
Memory	Shift + Pause / Step /
Status / Display	Display / Media
Down	Down
On Screen	Info / Angle
T.Tone	Text / Goto
Multi EQ	Guide / EPG / -/--

Original	Replacement
Output	Fav / Marker / PC
Speaker	AV / Input / RDS

