














 
 
 

 

 




















 
 


 
 
 


 
 


 



 
 

 
 




Original	Replacement	Original	Replacement
 Standby	 Power	 Open/Close	 Eject
 DVD	 Smart	 Tv/Video	 TV/R
 HDD	 Media	 Guide	 Guide
 1	 1	 Info	 Info
 2	 2	 Enter	 Ok
 3	 3	 Up	 Up
 4	 4	 Down	 Down
 5	 5	 Right	 Right
 6	 6	 Left	 Left
 7	 7	 Menu	 Menu
 8	 8	 Top Menu	 Shift + Menu
 9	 9	 Cancel	 Exit
 0	 0	 Navigation	 List
 Vol+ Tv	 Vol +	 Return	 Back
 Vol- Tv	 Vol -	 Edit	 Text
 PR+	 Ch +	 Prog	 Sleep
PR-	Ch -	Day(-)	Day(-)





Original	Replacement	Original	Replacement
 >> /Day(+)	 >>	 Rec	 Rec
 Play	 Play	 Angle/Live Check	 D. Menu
 Stop/Clear	 Stop	 Standby Tv	 Shift + Power
 Pause	 Pause	 Tv/Video Tv	 Shift + TV/R
 <</Slow-	 <<	 Live	 3D
 >>/Slow+	 >>	 ?/Help	 Pre Ch
 Memo/Mark	 AV	 PR+ Tv	 Shift + Ch +
 Red/Display	 Red	 PR- Tv	 Shift + Ch -
 Green/On	 Green	 Prog Tv	 Shift + Sleep
 Yellow/Recall	 Yellow	 1 Tv	 Shift + 1
 Blue/→	 Blue	 2 Tv	 Shift + 2
 Audio	 Dual	 3 Tv	 Shift + 3
 Subtitle/VPS/PDC/Timer	 Subt	 4 Tv	 Shift + 4
 Format/Output	 Format	 5 Tv	 Shift + 5
 Dubbing	 Shift + Options	 6 Tv	 Shift + 6
 Setup	 Options	 7 Tv	 Shift + 7
 Rec	 Shift + Rec	 8 Tv	 Shift + 8

Original	Replacement	Original	Replacement
 Rec	 Rec	 Angle/Live Check	 D. Menu
 Standby Tv	 Shift + Power	 Tv/Video Tv	 Shift + TV/R
 Live	 3D	 ?/Help	 Pre Ch
 PR+ Tv	 Shift + Ch +	 PR- Tv	 Shift + Ch -
 Prog Tv	 Shift + Sleep	 1 Tv	 Shift + 1
 2 Tv	 Shift + 2	 3 Tv	 Shift + 3
 4 Tv	 Shift + 4	 5 Tv	 Shift + 5
 6 Tv	 Shift + 6	 7 Tv	 Shift + 7
 8 Tv	 Shift + 8		



Mode/Remain



Original	Replacement	Original	Replacement
 9 Tv	 +  Shift + 9		
 0 Tv	 +  Shift + 0		
 Cancel Tv	 +  Shift + Exit		
 Tv Mute	 Mute		
 Guide Tv	 +  Shift + Guide		

