



Original	Replacement	Original	Replacement
Power	Power	4	4
Sleep	Sleep	5	5
Play Mode	+ Shift + Play	6	6
Tv/Video	TV/R	7	7
Repeat Mode	Text	8	8
Menu	Smart	9	9
Display	Info	10/0	0
Muting	Mute	>10 / -/--	Guide
Auto Format	List	Enter	Pre Ch
Night Mode	AV	Sound Field+	Ch +
Clear	Exit	Sound Field-	Ch -
Audio	Dual	Function	Media
Angle	Red	Tuner Band	Format
Subtitle	Subt	Vol+	Vol +
1	1	Vol-	Vol -
2	2	I<</Preset-	I<<
3	3	>>I/Preset+	I>>


 
 


 
 
 

 

 


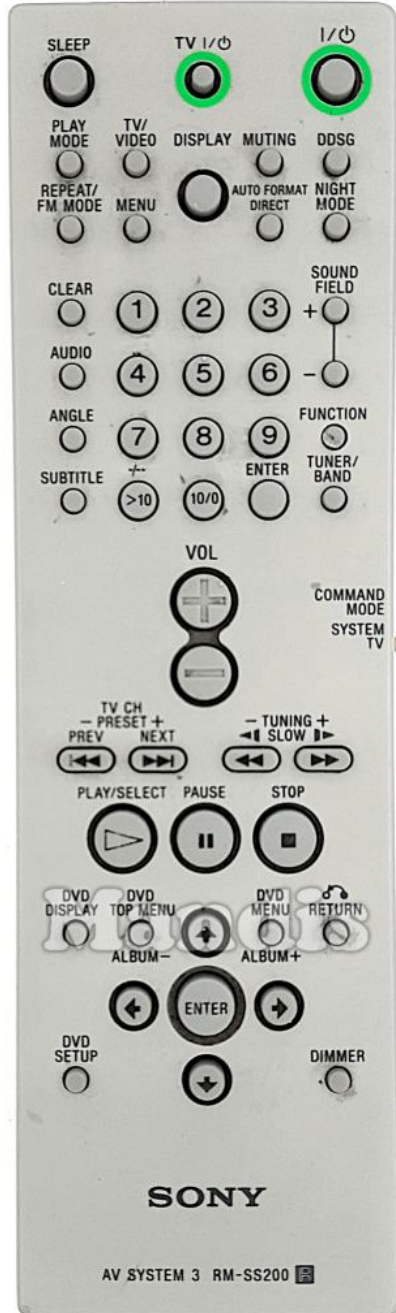



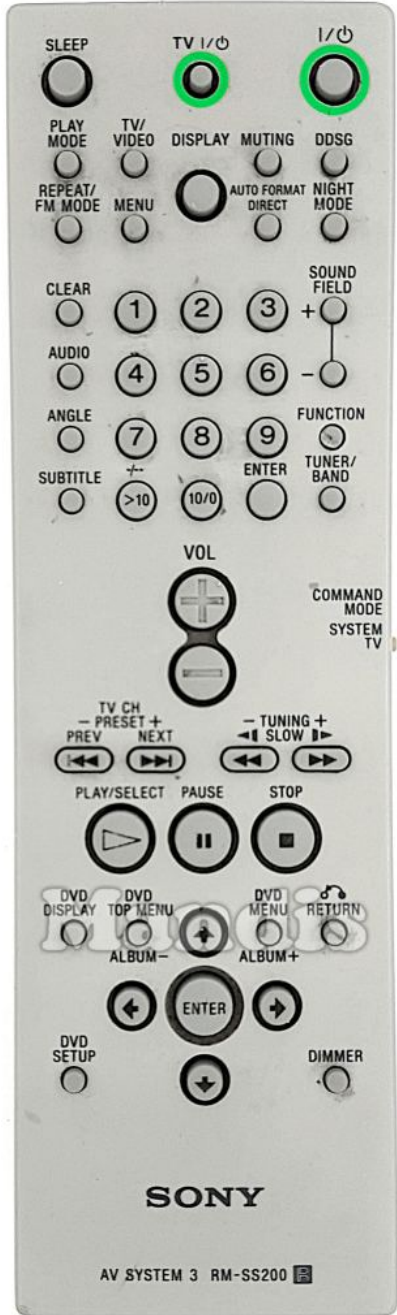




Original	Replacement	Original	Replacement
<</> Slow/Tune-	<<		
Tuning+ / Slow	>>		
Play	Play		
Pause	Pause		
Stop	Stop		
DVD Display	Shift + Info		
DVD Top	Menu		
DVD Menu /	D. Menu		
Return	Back		
Up	Up		
Left	Left		
Enter	Ok		
Right	Right		
Down	Down		
DVD Setup	Options		
Dimmer	Blue		





	Original	Replacement	Original	Replacement
	Power	 Power		
	1	 1		
	2	 2		
	3	 3		
	4	 4		
	5	 5		
	6	 6		
	7	 7		
	8	 8		
	9	 9		
	0	 0		
	-/--	 GUIDE		
	TV Vol+	 Vol +		
	TV Vol-	 Vol -		
	TV CH+	 Ch +		
	TV CH-	 Ch -		
	Tv/Video	 TV/R		

