



 

 

 
 

















 
 
 
 

 





Original	Replacement
 Power	 Power
 Input	 AV
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Guide	 Guide
 CH.List	 List
 Play	 Play
 Red	 Red
 Green	 Green

Original	Replacement
 Yellow	 Yellow
 Blue	 Blue
 [=]	 Menu
 Pause	 Pause
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Back	 Back
 Exit	 Exit
 Vol+	 Vol +
 Vol-	 Vol -
 Home	 Smart
 Micro	 Media
 CH+	 Ch +
 CH-	 Ch -



