


 







Original		Replacement		Original		Replacement	
	Power		Power		Up		Up
	Function		Menu		Down		Down
	Sleep		Sleep		Right		Right
	Play CD		Play		Left		Left
	Tuner/Band		Green		Enter		Ok
	<> Deck A		Yellow		Play MD		Shift + Play
	<> Deck B		Blue		Stop MD		Shift + Stop
	D.Skip		Options		GEQ		Dual
	Check		Text		P File		Subt
	Clear		Exit		Effect		TV/R
	Dimmer		Smart		Pro Logic		3D
	I<</Tuning-		I<<		T Tone		Media
	>>/Tuning+		>>I		DSP		Info
	Stop		Stop		Volume+		Vol +
	<<		<<		Volume-		Vol -
	>>		>>		Rear+		Ch +
	Pause		Pause		Rear-		Ch -





	Original	Replacement		Original	Replacement
	Center+	 2			
	Center-	 5			
	Clock/Timer/SET	 D.MENU			
	Timer/Select	 AV			

