



Original	Replacement	Original	Replacement
Power Receiver	Power	Stereo	Audio / Lang I/II
DVD	2	Input Sel	AV / Input / RDS
TV	1	Signal Select	Sound / Title
VCR	4	Midnight /	Sleep / Timer
CD-R	3	Mute	Mute / Dimmer
TUN	6	Up/Tune+	Up
Test Tone	Display / Media	Up/Tune+	Shift + >> /
Input ATT	TV/Radio /	Left/ST-	Left
FL Dimmer	Shift + Mute / Dimmer	Left/ST-	Shift + I<< / Preset-
CH Select	Smart / List	Enter	OK
CH Level-	CH- / Page-	Right/ST+	Right
CH Level+	CH+ / Page+	Right/ST+	Shift + >>I / Preset+
Effect-	<< / Tune-	Down/Tune-	Down
Effect+	>> / Tune+	Down/Tune-	Shift + << /
Remote Setup	Setup / OPT /	Master	Vol+
Standard	Subtitle / EQ	Master Volume-	Vol-
Adv.Surr.	Eject / Surround	TV Vol+	Shift + Vol+





Original	Replacement
	Shift + Vol-
	Shift + AV / Input / RDS
	Shift + Power

Original	Replacement





Original	Replacement	Original	Replacement
Power DVD	Power	Channel+ DVD	CH+ / Page+
1 DVD	1	Channel- DVD	CH- / Page-
2 DVD	2	Up DVD	Up
3 DVD	3	Down DVD	Down
4 DVD	4	Right DVD	Right
5 DVD	5	Left DVD	Left
6 DVD	6	Enter DVD	OK
7 DVD	7	Pause DVD	Pause / Step / Freeze
8 DVD	8	Rec DVD	Rec / Rec Mode
9 DVD	9	Play DVD	Play / Slow
0 DVD	0	<< DVD	<< / Tune-
+10 DVD	Guide / EPG / -/--	>> DVD	>> / Tune+
Menu DVD	Menu / Home	>>I DVD	>>I / Preset+
Top Menu DVD	D.Menu / Top	Stop DVD	Stop / Hold
Master	Vol+	I<< DVD	I<< / Preset-
Master volume-	Vol-	Audio DVD	Audio / Lang I/II
Mute	Mute / Dimmer	Sub Title DVD	Subtitle / EQ











 











 







 



 







 










 


















Original	Replacement
Angle DVD	Info / Angle
Power VCR	Shift + Power
1 VCR	Shift + 1
2 VCR	Shift + 2
3 VCR	Shift + 3
4 VCR	Shift + 4
5 VCR	Shift + 5
6 VCR	Shift + 6
7 VCR	Shift + 7
8 VCR	Shift + 8
9 VCR	Shift + 9
0 VCR	Shift + 0
Disc VCR	Shift + Back / Return
Channel+ VCR	Shift + CH+ /
Channel- VCR	Shift + CH- /
Up VCR	Shift + Up
Down VCR	Shift + Down

Original	Replacement
Right VCR	Shift + Right
Left VCR	Shift + Left
Enter VCR	Shift + OK
Pause VCR	Shift + Pause / Step /
Play VCR	Shift + Play /
Stop VCR	Shift + Stop /
<< VCR	Shift + << /
>>I VCR	Shift + >>I / Preset+
>> VCR	Shift + >> /
I<< VCR	Shift + I<< / Preset-
Rec VCR	Shift + Rec / Rec Mode







 

 
 










 















 



Original	Replacement	Original	Replacement
 Power CD	 Power	 Channel- CD	 CH- / Page-
 1 CD	 1	 Up CD	 Up
 2 CD	 2	 Down CD	 Down
 3 CD	 3	 Right CD	 Right
 4 CD	 4	 Left CD	 Left
 5 CD	 5	 Enter CD	 OK
 6 CD	 6	 Pause CD	 Pause / Step / Freeze
 7 CD	 7	 Play CD	 Play / Slow
 8 CD	 8	 << CD	 << / Tune-
 9 CD	 9	 >> CD	 >> / Tune+
 0 CD	 0	 >>  CD	 >>  / Preset+
 +10 CD	 Guide / EPG / -/--	 I<< CD	 I<< / Preset-
 Disc CD	 Back / Return	 Stop CD	 Stop / Hold
 Master	 Vol+	 Power TVC	 Shift + Power
 Master Volume-	 Vol-	 1 TVC	 Shift + 1
 Mute	 Mute / Dimmer	 2 TVC	 Shift + 2
 Channel+ CD	 CH+ / Page+	 3 TVC	 Shift + 3



 





 
























 










 



 






 







Original	Replacement
 4 TVC	 Shift + 4
 5 TVC	 Shift + 5
 6 TVC	 Shift + 6
 7 TVC	 Shift + 7
 8 TVC	 Shift + 8
 9 TVC	 Shift + 9
 0 TVC	 Shift + 0
 +10 TVC	 Shift + Guide / EPG / -/-
 Disc TVC	 Shift + Back / Return
 Menu TVC	 Shift + Menu /
 Up TVC	 Shift + Up
 Down TVC	 Shift + Down
 Right TVC	 Shift + Right
 Left TVC	 Shift + Left
 Enter TVC	 Shift + OK
 Pause TVC	 Shift + Pause / Step /
 Rec TVC	 Shift + Rec / Rec Mode

Original	Replacement
 Play TVC	 Shift + Play /
 Stop TVC	 Shift + Stop /
 << TVC	 Shift + << /
 >>I TVC	 Shift + >>I / Preset+
 >> TVC	 Shift + >> /
 I<< TVC	 Shift + I<< / Preset-





Original	Replacement	Original	Replacement
 Power TUN	 Power	 Left TUN	 Left
 1 TUN	 1	 D.Access TUN	 Play / Slow
 2 TUN	 2	 Band TUN	 Smart / List
 3 TUN	 3	 T.Edit	 Pause / Step / Freeze
 4 TUN	 4	 Class TUN	 << / Tune-
 5 TUN	 5	 RF ATT TUN	 >> / Tune+
 6 TUN	 6	 MPX TUN	 Stop / Hold
 7 TUN	 7	 Display TUN	 Display / Media
 8 TUN	 8	 Power CDR	 Shift + Power
 9 TUN	 9	 1 CDR	 Shift + 1
 0 TUN	 0	 2 CDR	 Shift + 2
 Master	 Vol+	 3 CDR	 Shift + 3
 Master volume-	 Vol-	 4 CDR	 Shift + 4
 Mute	 Mute / Dimmer	 5 CDR	 Shift + 5
 Up TUN	 Up	 6 CDR	 Shift + 6
 Down TUN	 Down	 7 CDR	 Shift + 7
Right TUN	Right	8 CDR	Shift + 8





Original	Replacement
9 CDR	Shift + 9
0 CDR	Shift + 0
+10 CDR	Shift + Guide / EPG / -/-
Channel+ CDR	Shift + CH+ /
Channel- CDR	Shift + CH- /
Up CDR	Shift + Up
Down CDR	Shift + Down
Right CDR	Shift + Right
Left CDR	Shift + Left
Enter CDR	Shift + OK
Pause CDR	Shift + Pause / Step /
Play CDR	Shift + Play /
Stop CDR	Shift + Stop /
<< CDR	Shift + << /
Rec CDR	Shift + Rec / Rec Mode
I<< CDR	Shift + I<< / Preset-
>> CDR	Shift + >> /

Tune+

Original	Replacement
>>I CDR	Shift + >>I / Preset+

