



| Original         | Replacement      |
|------------------|------------------|
| Standby          | Power            |
| AQT/Auto/Open/CI | Eject / Surround |
| P.Mode           | Picture / Format |
| S.Mode           | Sound / Title    |
| List/Angle       | Smart / List     |
| Aspect           | Setup / OPT /    |
| 1                | 1                |
| 2                | 2                |
| 3                | 3                |
| 4                | 4                |
| 5                | 5                |
| 6                | 6                |
| 7                | 7                |
| 8                | 8                |
| 9                | 9                |
| 0                | 0                |
| Recall           | Back / Return    |

| Original       | Replacement           |
|----------------|-----------------------|
| Vol+           | Vol+                  |
| Vol-           | Vol-                  |
| Mute           | Mute / Dimmer         |
| Audio          | Audio / Lang I/II     |
| Sub-T          | Subtitle / EQ         |
| CH+            | CH+ / Page+           |
| CH-            | CH- / Page-           |
| Menu           | Menu / Home           |
| Info           | Info / Angle          |
| Input          | AV / Input / RDS      |
| DVD Setup/Exit | Exit / Cancel / Clear |
| Sleep          | Sleep / Timer         |
| Up             | Up                    |
| Down           | Down                  |
| Right          | Right                 |
| Left           | Left                  |
| OK             | OK                    |





| Original       | Replacement                 |
|----------------|-----------------------------|
| Rec            | Rec / Rec Mode              |
| Red/D.Prog/Tv/ | Red / Netflix / Search      |
| Green/Step     | Green / APP / Repeat        |
| Yellow/RPT     | Yellow / YouTube / Repeat   |
| Blue/A-B/SCR   | Blue / Prime Video / Random |
| [=]/Slow       | Text / Goto                 |
| [=▲]/Stop      | Stop / Hold                 |
| [=▼]/Zoom      | Zoom / Size                 |
| [=i]/I<<       | I<< / Preset-               |
| [+]/Play/Pause | Play / Slow                 |
| [=◇]/>>I       | >>I / Preset+               |
| [=?]/<<<       | <<< / Tune-                 |
| [=o]/>>>       | >>> / Tune+                 |
| EPG/D.Menu     | Guide / EPG / -/--          |
| FAV/D.Title    | Fav / Marker / PC           |
| FAV+/D.Goto    | Shift + CH+ /               |
| FAV-/D.Disp    | Shift + CH- /               |

| Original | Replacement |
|----------|-------------|
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |





| Original         | Replacement      |
|------------------|------------------|
| Standby          | Power            |
| AQT/Auto/Open/CI | Eject / Surround |
| P.Mode           | Picture / Format |
| S.Mode           | Sound / Title    |
| List/Angle       | Smart / List     |
| Aspect           | Setup / OPT /    |
| 1                | 1                |
| 2                | 2                |
| 3                | 3                |
| 4                | 4                |
| 5                | 5                |
| 6                | 6                |
| 7                | 7                |
| 8                | 8                |
| 9                | 9                |
| 0                | 0                |
| Recall           | Back / Return    |

| Original       | Replacement           |
|----------------|-----------------------|
| Vol+           | Vol+                  |
| Vol-           | Vol-                  |
| Mute           | Mute / Dimmer         |
| Audio          | Audio / Lang I/II     |
| Sub-T          | Subtitle / EQ         |
| CH+            | CH+ / Page+           |
| CH-            | CH- / Page-           |
| Menu           | Menu / Home           |
| Info           | Info / Angle          |
| Input          | AV / Input / RDS      |
| DVD Setup/Exit | Exit / Cancel / Clear |
| Sleep          | Sleep / Timer         |
| Up             | Up                    |
| Down           | Down                  |
| Right          | Right                 |
| Left           | Left                  |
| OK             | OK                    |



