








 






Original	Replacement
Standby	Power
Open/Close	Eject / Surround
Up	Up
Down	Down
Right	Right
Left	Left
Set Up	Setup / OPT /
Return	Back / Return
Menu	Menu / Home
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Red	Red / Netflix / Search
Blue	Blue / Prime Video / Random
Play	Play / Slow
Pause/Step	Pause / Step / Freeze
Stop	Stop / Hold
I<<	I<< / Preset-

Original	Replacement
>>	>> / Preset+
<<	<< / Tune-
>>	>> / Tune+
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
10+	Guide / EPG / -/-
Audio	Audio / Lang I/II
Title	Sound / Title
Clear	Exit / Cancel / Clear





Original	Replacement
REPEAT Repeat	 +  Shift + Green / APP /
PROG Prog	 TV/Radio /
ZOOM Zoom	 Zoom / Size
V-REMOTE V-Remote	 Picture / Format
INTRO Intro	 OK
EQ EQ	 +  Shift + Subtitle / EQ
KARAOKE Karaoke	 AV / Input / RDS
MARK Mark	 Fav / Marker / PC
SEARCH Search	 +  Shift + Red / Netflix /
DISPLAY Display	 Display / Media
IS/PS IS/PS	 Smart / List
SUBTITLE Subtitle	 Subtitle / EQ
VOL + Vol+	 Vol+
VOL - Vol-	 Vol-

Original	Replacement

