



Original	Replacement
	Power
	Mute / Dimmer
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	Guide / EPG / -/--
	AV / Input / RDS
	Menu / Home
	Back / Return
	OK

Original	Replacement
	Up
	CH+ / Page+
	CH- / Page-
	Down
	Right
	Vol+
	Left
	Vol-
	Text / Goto
	Fav / Marker / PC
	Setup / OPT /
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	Display / Media
	Picture / Format



