 







 

 

 

 

 

 

 

 















Original	Replacement
 Power	 Power
 Tuner	 Shift + 6
 Source	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 .	 Setup / OPT /
 Mute	 Mute / Dimmer
 You Tube	 Shift + Yellow / YouTube /
 Internet	 Display / Media

Original	Replacement
 Home	 Shift + Menu /
 Netflix	 Shift + Red / Netflix /
 Vol+	 Vol+
 Vol-	 Vol-
 CH+	 CH+ / Page+
 CH-	 CH- / Page-
 *	 Menu / Home
 Up	 Up
 Down	 Down
 Right/Zoom+	 Right
 Left/Zoom-	 Left
 OK	 OK
 Back	 Back / Return
 Exit	 Exit / Cancel / Clear
 Info	 Info / Angle
 USB	 Shift + 8
 =	 Text / Goto





Original	Replacement
Sleep	Sleep / Timer
Guide	Guide / EPG / -/--
FAV	Fav / Marker / PC
CH.List	Smart / List
Picture	Picture / Format
Sound	Sound / Title
CC	Subtitle / EQ
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
I<	I<< / Preset-
Stop	Stop / Hold
Play	Play / Slow
Pause	Pause / Step / Freeze
>I button"/> >I	>>I / Preset+
<< button"/> <<	<< / Tune-

Original	Replacement
>>	>> / Tune+
MTS	D.Menu / Top

