

 

 





 

 

 

 

 

 

 

 

 

 

 



 

 

 



 



 



 



 





 





Original		Replacement		Original		Replacement	
	Power		Power		2		2
	Disc/Menu		Menu / Home		3		3
	Eject		Eject / Surround		4		4
	Display		Display / Media		5		5
	Up		Up		6		6
	Down		Down		7		7
	Right		Right		8		8
	Left		Left		9		9
	OK		OK		0		0
	Return/Title		Back / Return		Subtitle		Subtitle / EQ
	Setup		Setup / OPT /		Audio/Create MP3		Audio / Lang I/II
	I<<		I<< / Preset-		Zoom		Zoom / Size
	Play/Pause		Play / Slow		Repeat		Green / APP / Repeat
	>>I		>>I / Preset+		Repeat A-B		Yellow / YouTube / Repeat
	Stop		Stop / Hold				
	USB		Shift + 8				
	1		1				

