



Original	Replacement
	Power
	Fav / Marker / PC
	Sleep / Timer
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	OK
	Exit / Cancel / Clear
	Up
	Down

Original	Replacement
	Rec / Rec Mode
	Pause / Step / Freeze
	<< / Tune-
	Play / Slow
	>> / Tune+
	I<< / Preset-
	Stop / Hold
	>>I / Preset+
	Smart / List
	Setup / OPT /
	Display / Media
	AV / Input / RDS

