



| Original | Replacement |
|--|---|
|  Standby/On |  Power |
|  Open/Close |  Eject / Surround |
|  Audio |  Audio / Lang I/II |
|  Subtitle |  Subtitle / EQ |
|  Angle |  Info / Angle |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  0 |  0 |
|  Clear |  Exit / Cancel / Clear |
|  Top Menu |  D.Menu / Top |





| Original | Replacement |
|--|--|
|  Menu |  Shift + Menu / |
|  Home Menu |  Menu / Home |
|  Return |  Back / Return |
|  Up |  Up |
|  Down |  Down |
|  Right |  Right |
|  Left |  Left |
|  Enter |  OK |
|  << / < / < |  << / Tune- |
|  Play |  Play / Slow |
|  >> / > / > |  >> / Tune+ |
|  << |  << / Preset- |
|  Pause |  Pause / Step / Freeze |
|  Stop |  Stop / Hold |
|  >> |  >> / Preset+ |
|  Play Mode |  Guide / EPG / -/- |
|  Surround |  Shift + Eject / Surround |





Original

Replacement

| | | | |
|---|---------|---|-----------------|
|  | Zoom |  | Zoom / Size |
|  | Display |  | Display / Media |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

Original

Replacement

| | |
|--|--|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

