






















 





Original	Replacement
 Power	 Power
 Open/Close	 Eject / Surround
 Subtitle	 Subtitle / EQ
 Angle	 Info / Angle
 Language	 Audio / Lang I/II
 Setup	 Setup / OPT /
 Menu	 Menu / Home
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Play	 Play / Slow
 Slow	 +  Shift + Play /
 Pause/Step	 Pause / Step / Freeze
 Stop	 Stop / Hold
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+

Original	Replacement
 <<	 << / Tune-
 >>	 >> / Tune+
 V-Mode	 Picture / Format
 Repeat	 Green / APP / Repeat
 Zoom	 Zoom / Size

